
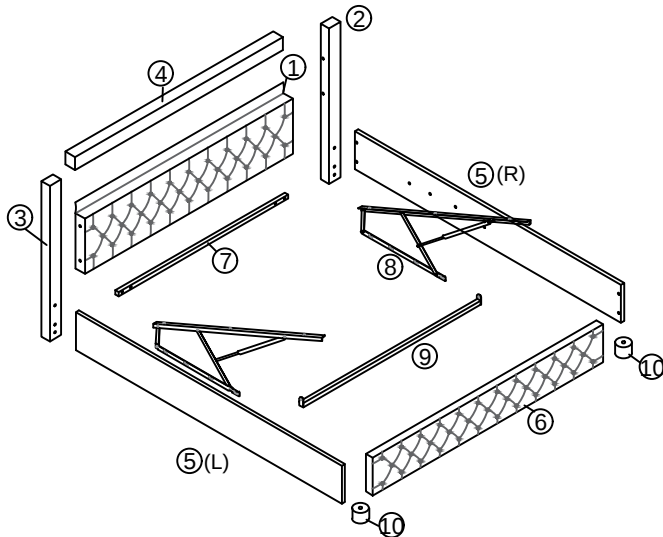


# ASSEMBLY INSTRUCTION


Item Number:WF300738AAA WF300738AAS  
WF300739AAA WF300739AAS

Upholstered Bed 180x200

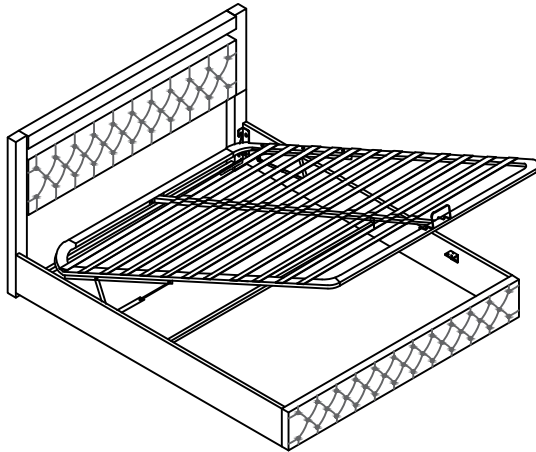

## TIPS




1. This product is divided into 2 parcels for delivery. They may not arrive at the same time. Please wait patiently.
2. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
3. Insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws can not target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
4. 2 people are recommended to finish

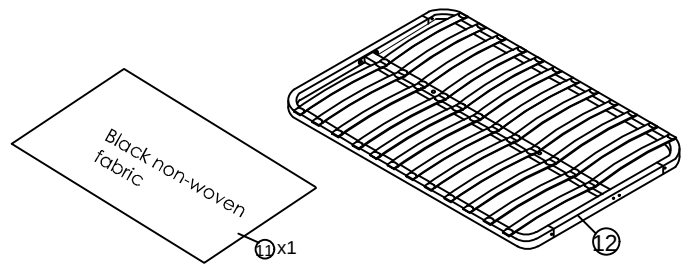








| Parts List |                      |     | Hardware List |                  |     |
|------------|----------------------|-----|---------------|------------------|-----|
| NO         | ITEM                 | QTY | NO            | ITEM             | QTY |
| 1          | Head board           | 1   | A             | Allen Key        | 1   |
| 2          | Side head board      | 1   | B             | Bolts (M8x45mm)  | 20  |
| 3          | Side head board      | 1   | C             | Washer           | 4   |
| 4          | Head board bar       | 1   | D             | Bolts (M8x18mm)  | 28  |
| 5          | Side rails           | 2   | E             | Nuts             | 14  |
| 6          | Foot board           | 1   | F             | Nails (M4x25mm)  | 12  |
| 7          | Head board cross bar | 1   | G             | Nails (M4x50mm)  | 2   |
| 8          | Gas lift             | 2   | H             | Nuts             | 2   |
| 9          | Cross bar            | 1   | I             | Bolts (M6x25mm)  | 10  |
| 10         | Legs                 | 2   | J             | Spanner          | 1   |
| 11         | Non woven fabric     | 1   | K             | Hinge            | 4   |
| 12         | Slat frame           | 1   | L             | Plastic support  | 4   |
|            |                      |     | M             | Middle legs      | 2   |
|            |                      |     | N             | Middle slats     | 12  |
|            |                      |     | O             | End slats cap    | 24  |
|            |                      |     | P             | Stopper          | 1   |
|            |                      |     | Q             | Three hole iron  | 4   |
|            |                      |     | R             | Led adapter      | 1   |
|            |                      |     | S             | Color controller | 1   |

Part List

WF300738AAA / WF300738AAS
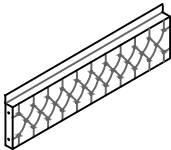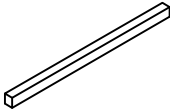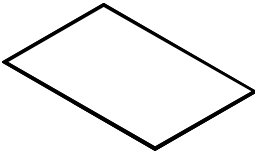
|                                                                                                                                            |                                                                                                                                          |                                                                                                                                            |
|--------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| <div>1</div> <div></div> <div>Head board-1pc</div>        | <div>2</div> <div></div> <div>Head board legs-1pc</div> | <div>3</div> <div></div> <div>Head board legs-1pc</div> |
| <div>4</div> <div></div> <div>Head board bar-1pc</div>    | <div>8</div> <div></div> <div>Gas lift-2pcs</div>       | <div>10</div> <div></div> <div>Legs -2pcs</div>         |
| <div>11</div> <div></div> <div>Non woven fabric-1pc</div> |                                                                                                                                          |                                                                                                                                            |


Hardware List+WF300739AAA / WF300739AAS
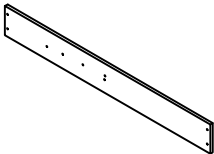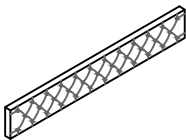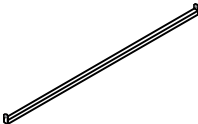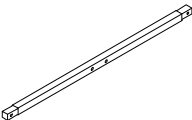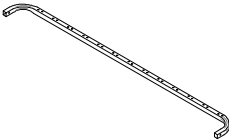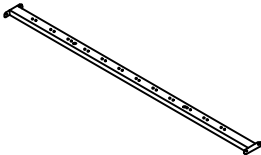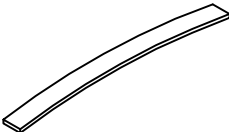
|                                                                                                                                                      |                                                                                                                                                      |                                                                                                                                                       |
|------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>5</div> <div></div> <div>Side rails -2pcs</div>              | <div>6</div> <div></div> <div>Foot board -1pc</div>               | <div>7</div> <div></div> <div>Head board cross bar -1pc</div>    |
| <div>9</div> <div></div> <div>Cross bar -1pc</div>                | <div>12.1</div> <div></div> <div>Metal frame cross bar-2pcs</div> | <div>12.2</div> <div></div> <div>Metal frame side bar-2pcs</div> |
| <div>12.3</div> <div></div> <div>Metal frame middle bar-1pc</div> | <div>12.4</div> <div></div> <div>Slat-24pcs</div>                 |                                                                                                                                                       |

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

Step 1x2


Fix the Headboard legs ②/③ to the headboard ① With Bolts B and Washers C by using Allen key A.

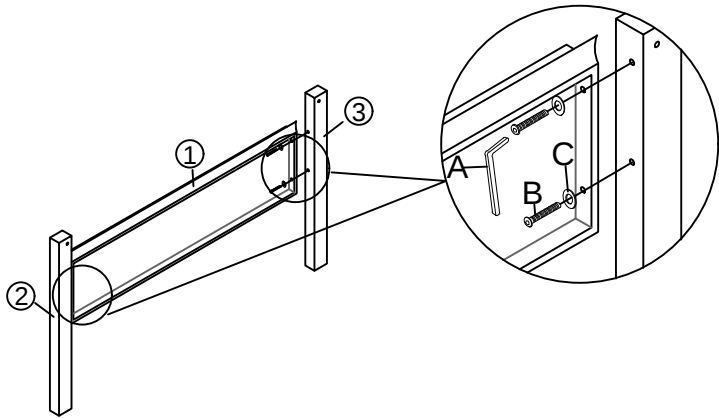

|                                                                                     |                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| A Allen Key x1                                                                      | B Bolts x 4<br>M8X45mm                                                              | C Washer x 4                                                                        |
|  |  |  |

Step 2x2


Fix the Headboard bar ④ to the Side head board ②and③ with Three hole iron Q and Bolts D by using Allen key A,then stick the back cover.

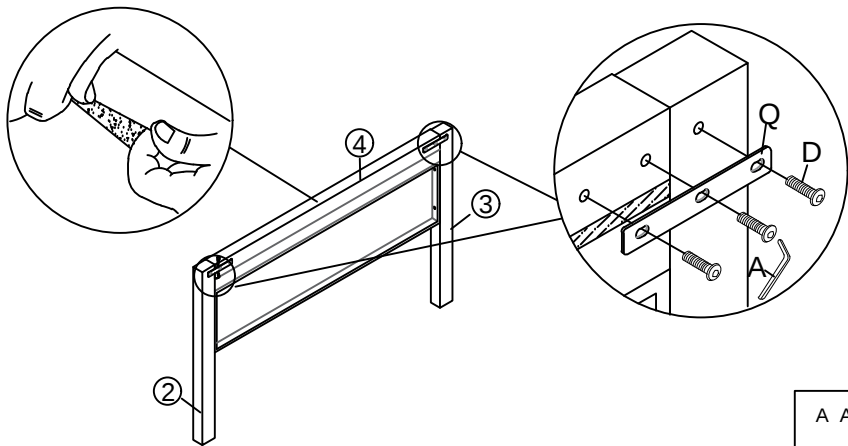

|                                                                                       |                                                                                       |                                                                                       |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| A Allen Key                                                                           | D Bolts x 6<br>M8X18mm                                                                | Q Three hole iron x2                                                                  |
|  |  |  |

Step 3


Fix the Headboard cross bar ⑦ to the Headboard legs ②/③ with Bolt D and Three hole iron Q by using Allen key A.

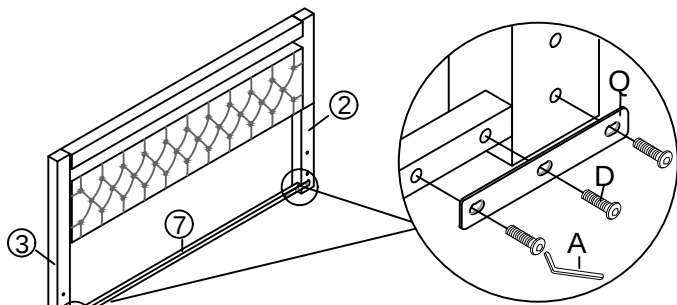

|                                                                                       |                                                                                       |                                                                                       |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| A Allen Key                                                                           | D Bolts x 6<br>M8X18mm                                                                | Q Three hole iron x2                                                                  |
|  |  |  |

Step 4


Fix the side rails ⑤ to the side head board legs ② , ③ and foot board ⑥ with Bolts D and hinges K by using Allen key A

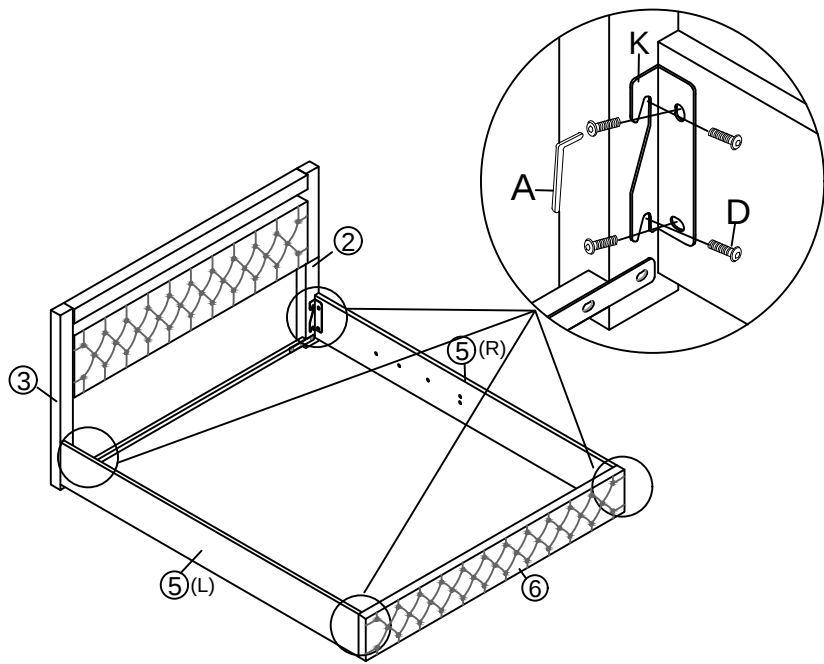

|                                                                                     |                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| A Allen Key                                                                         | D Bolts x 16<br>M8X18mm                                                             | K Hinge x4                                                                          |
|  |  |  |

Step 5


Fix the plastic support L to the side rails ⑤ and footboard ⑥ with nails F by using electric drill or screw driver

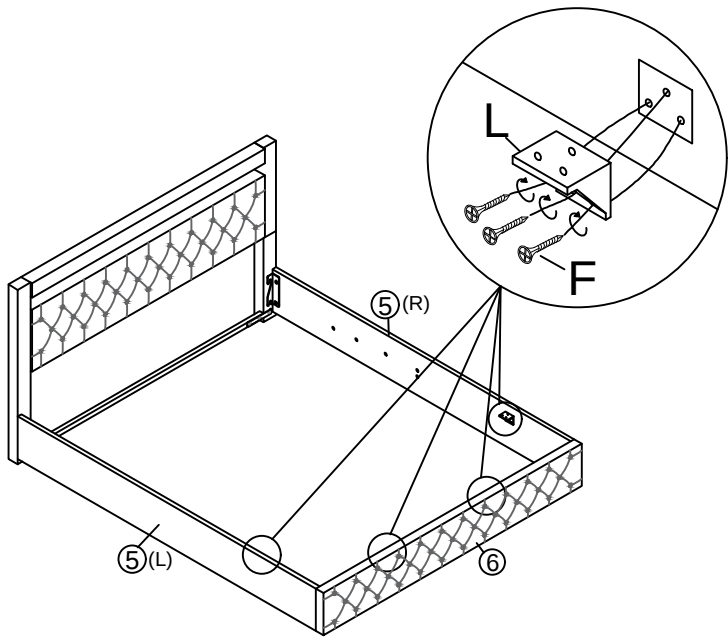

|                                                                                       |                                                                                       |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| F Nails x12<br>M4X25mm                                                                | L Plastic support x4                                                                  |
|  |  |

Step 6


Fix the cross bar ⑨ to the side rails ⑤ with bolts I by using electric drill or screw driver.

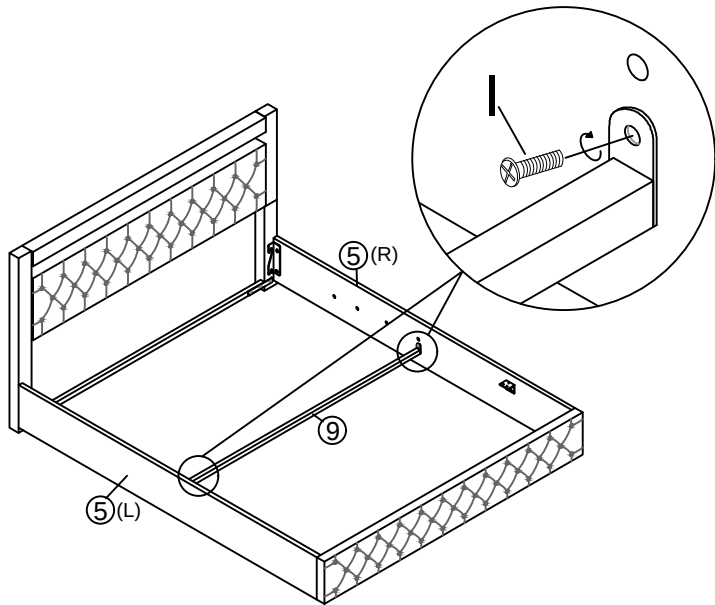

|                                                                                       |
|---------------------------------------------------------------------------------------|
| I Bolts x 2<br>M6X25mm                                                                |
|  |

Step 7 x2


Fix the gas lifts⑧ to the side rails⑤ with blots I by using electric drill.fix the gas bar to the gas lifts ⑧ with nuts H .

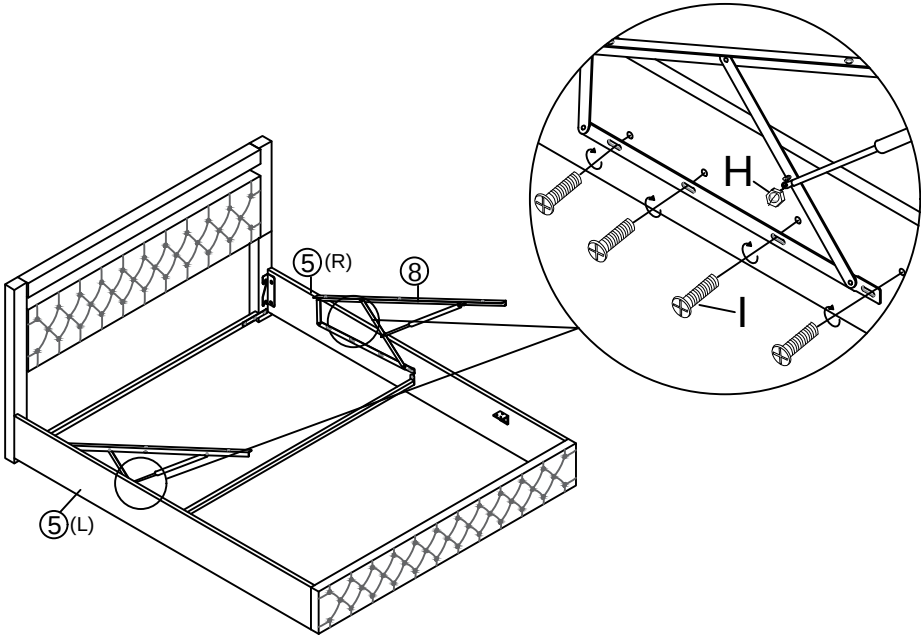

|                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| H Nuts x2                                                                           | I Bolts x 8                                                                         |
|  |  |
|                                                                                     | M6X25mm                                                                             |


Step 8

Stick the black non-woven fabric⑪ To the bottom of bed

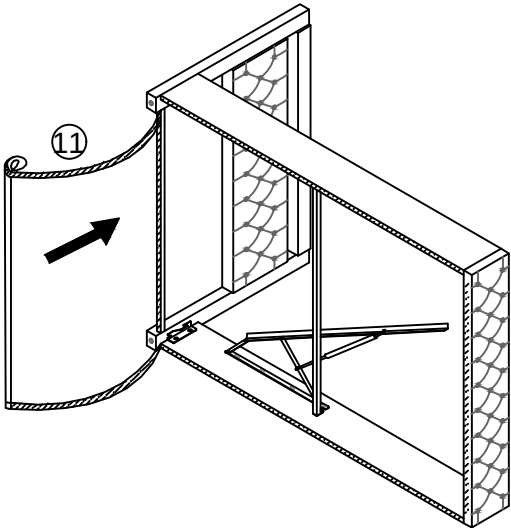

Step 9


Fix the legs⑩ to the footboard⑥ with nails G by using electric drill or screw driver

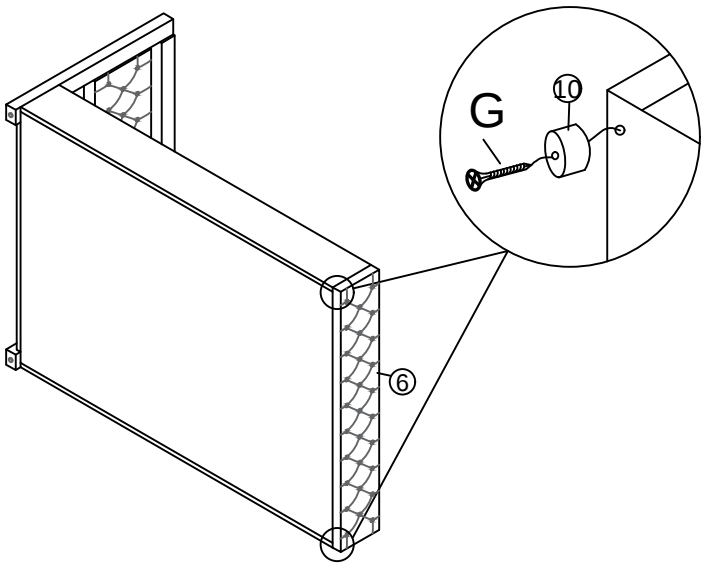

|                                                                                       |
|---------------------------------------------------------------------------------------|
| G Nails x2                                                                            |
|  |
| M4X50mm                                                                               |


# Step 10

Assemble the slats frame with bolts B and nuts E by using Spanner J

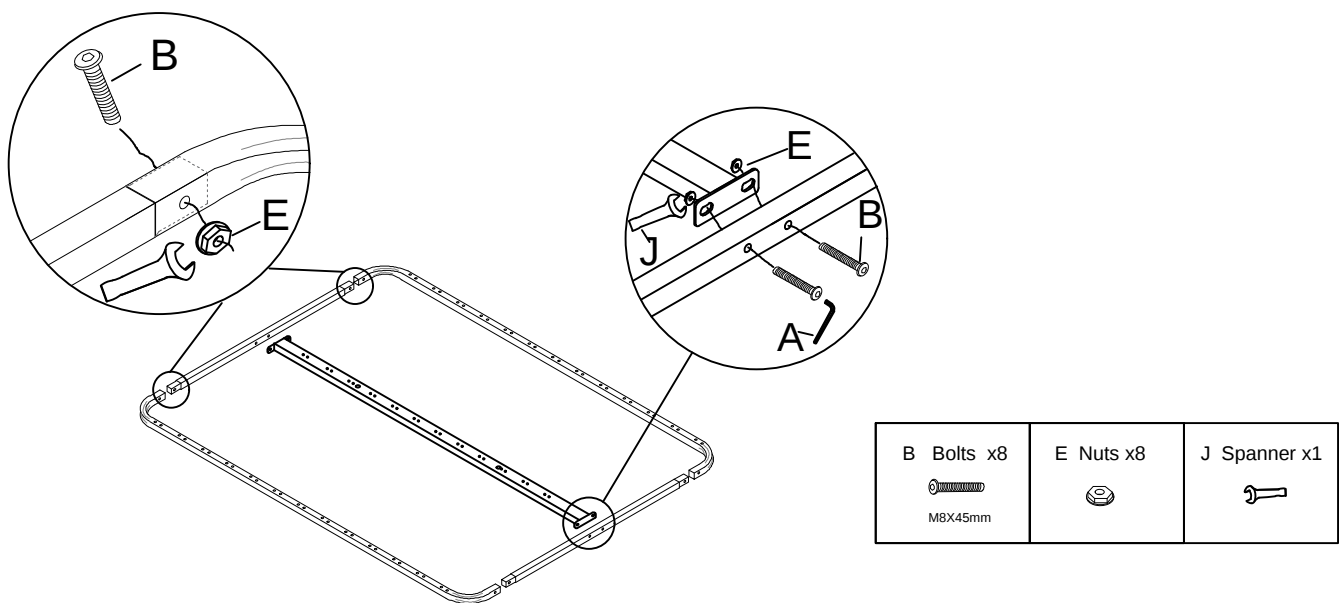


# Step 11 x2

Fix middle legs M to the middle bar with bolts B by using Allen key A

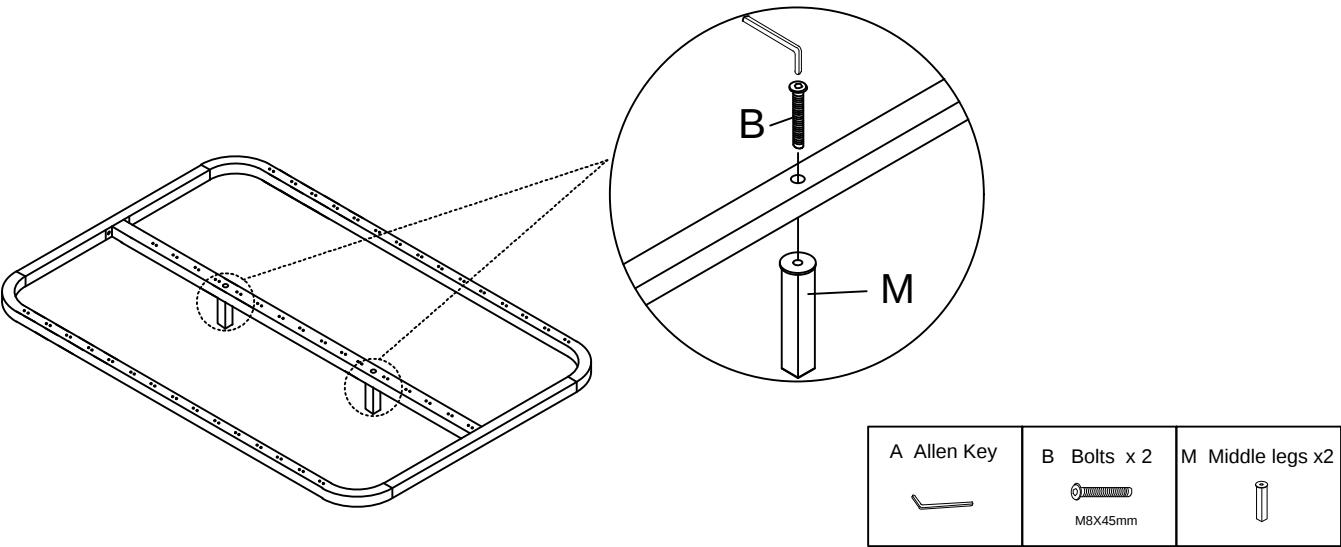


# Step 12

Assemble the slats into the assembled slats frame with middle slats cap N and end slats cap O

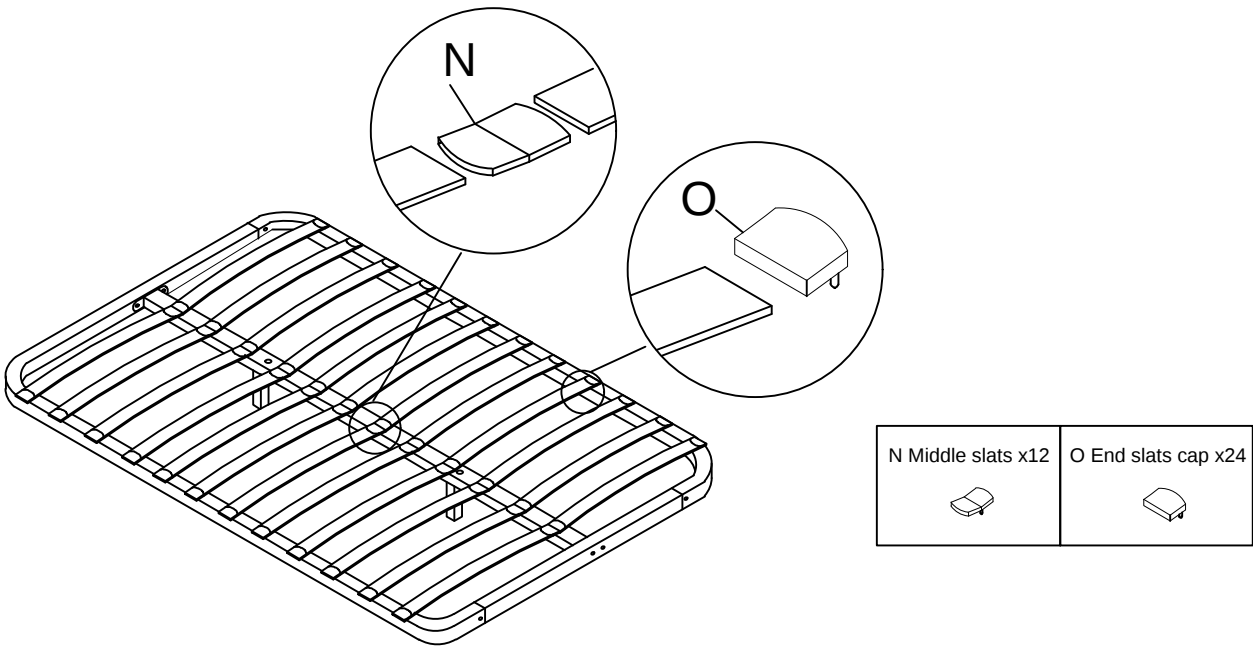

Step 13


Assemble the slats frame ⑫ to the gas lifts ⑧ with bolts B and nuts E, put the stopper P in the end of the slat frame.

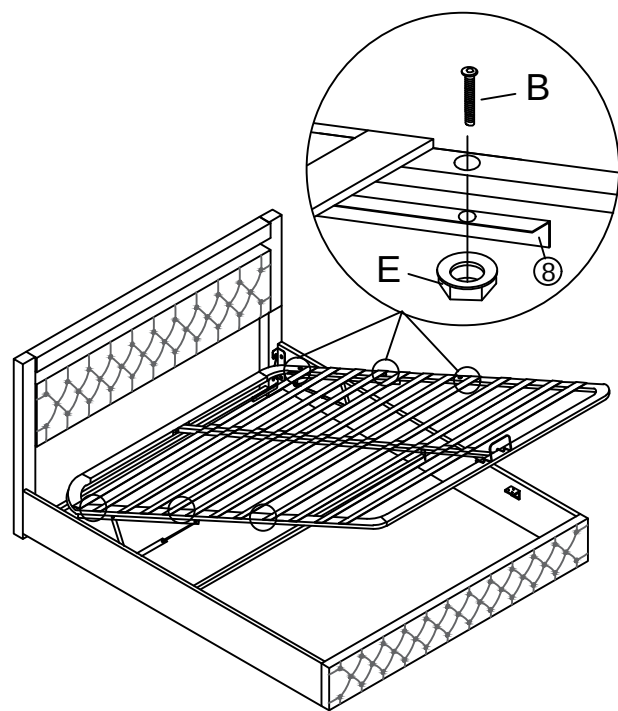


|                                                                                                              |                                                                                                  |                                                                                                     |
|--------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| B Bolts x6<br><br>M8X45mm | E Nuts x6<br> | P Stopper x1<br> |
|--------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|

Step 14

Put the color controller S to the light line ,please notice that → ←.  
Fix the Led adapter R to the Color controller S.Finally connect the power,and enjoy the bed.

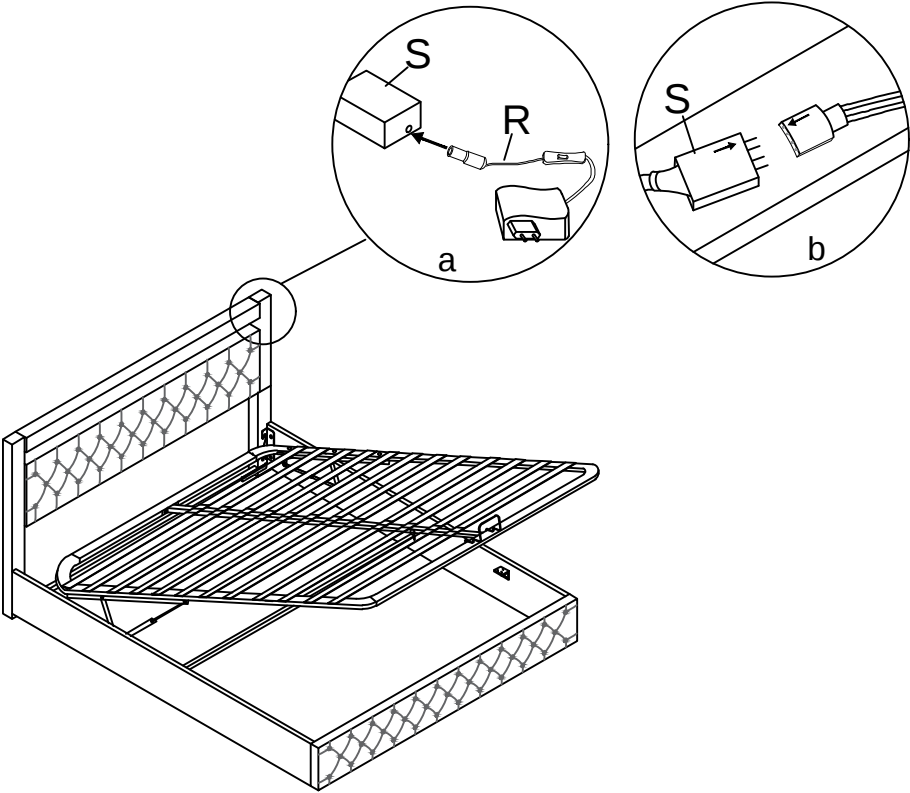

|                                                                                                           |                                                                                                                |
|-----------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| R Led adapter x1<br> | S Color controller x1<br> |
|-----------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|

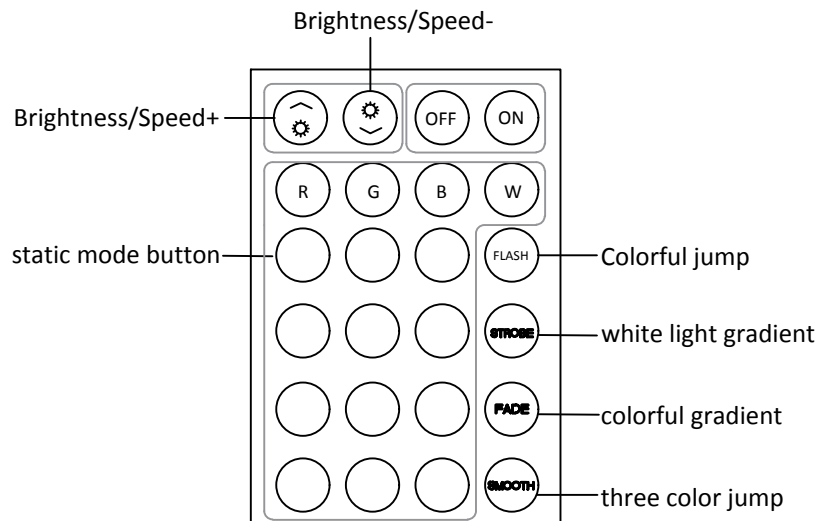

**NOTICE:**

When you use the remote control board to control the color of the light, please be sure to point the remote control at the color controller Q