
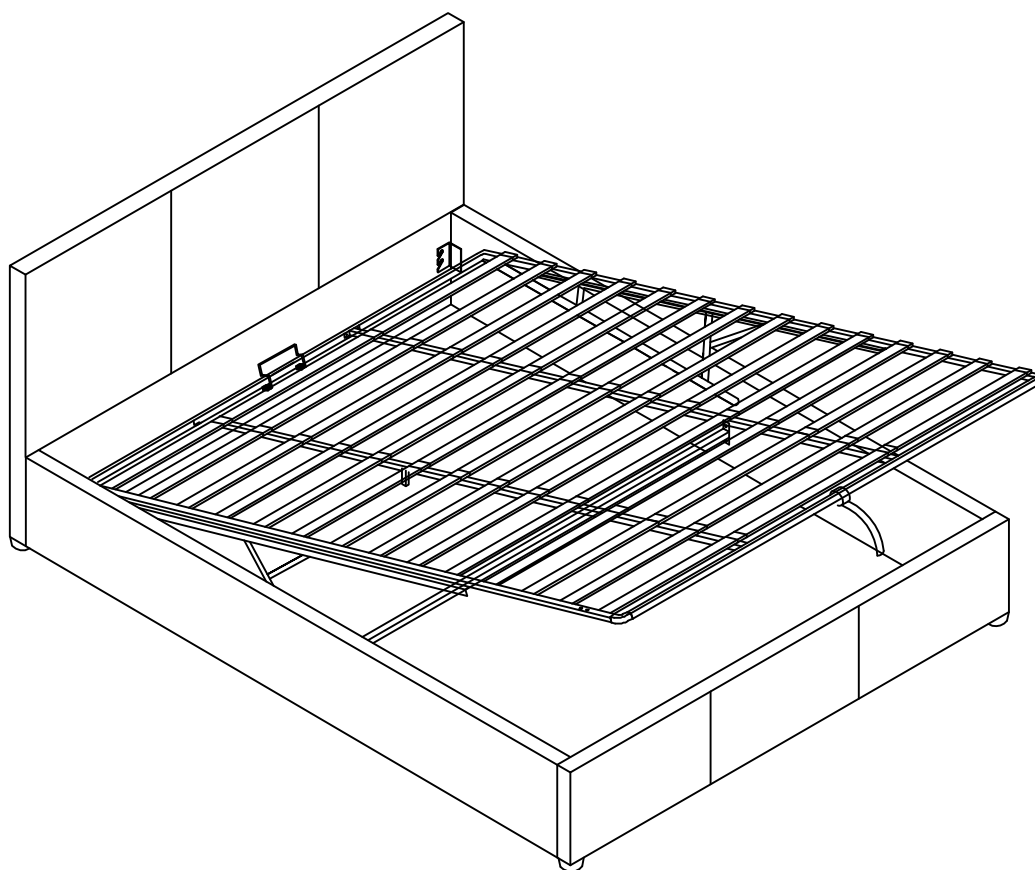
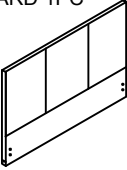

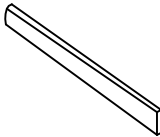
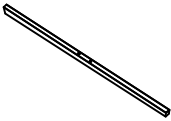



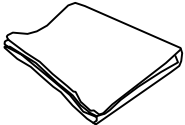


ASSEMBLY INSTRUCTIONS







BOUSSE

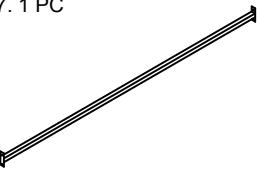


Parts List

1. HEAD BOARD 1PC 	2. FOOT BOARD 1PC 	3. SIDE RAIL 2PCS 	4. BEDSTEAD RAIL 2 SETS 
5. BEDSTEAD RAIL 2 SETS 	6. SLAT 39 PCS 	7. Single Plastic Cap 26pcs 	8. Double Plastic Cap 26pcs 
9. 4 PCS 	10. 4 PCS 	11. Center Support Bar 2pcs 	12. 2 pcs 
13. Digging rope 1PC 	14. 1 PC 	15. Support Leg 4 PCS 	16. Non-woven fabrics 1pc 
17. 1 PC 			

Hardware List


A. M8*30 x16 PCS 	B. M8*40 x 22 PCS 	C. 22 pcs 	D. 8 pcs 
E. 8 PCS 	F. M5*1PC 	G. 1 pcs 	H. 1 pcs 
I. M8*25 x4 PCS 	J. M4*40x4 PCS 		

Step1

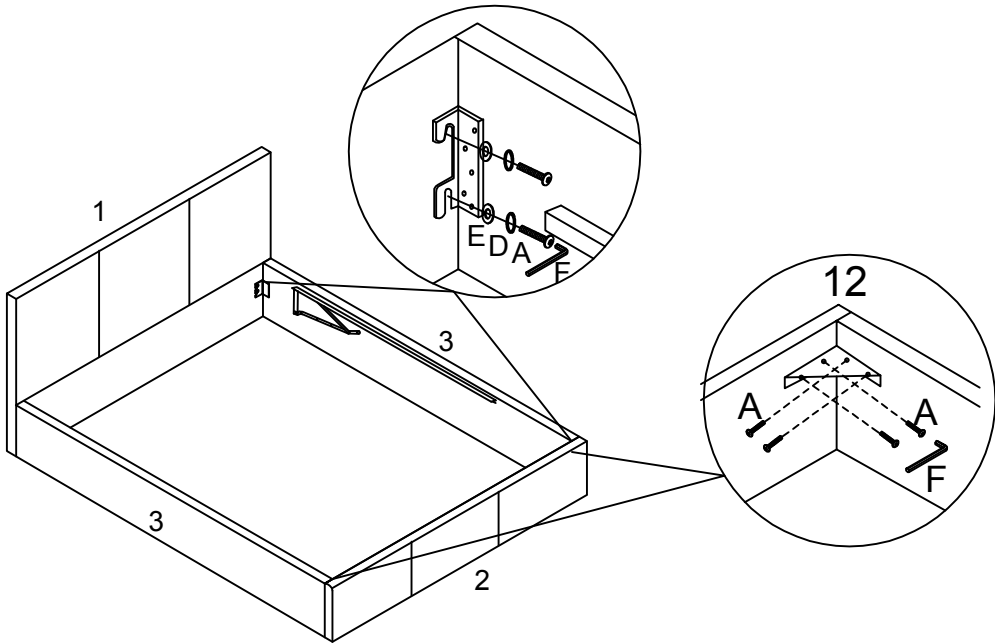


12.x2	
E.x8	
D.x8	
F.x1	
A.x16	

Step2

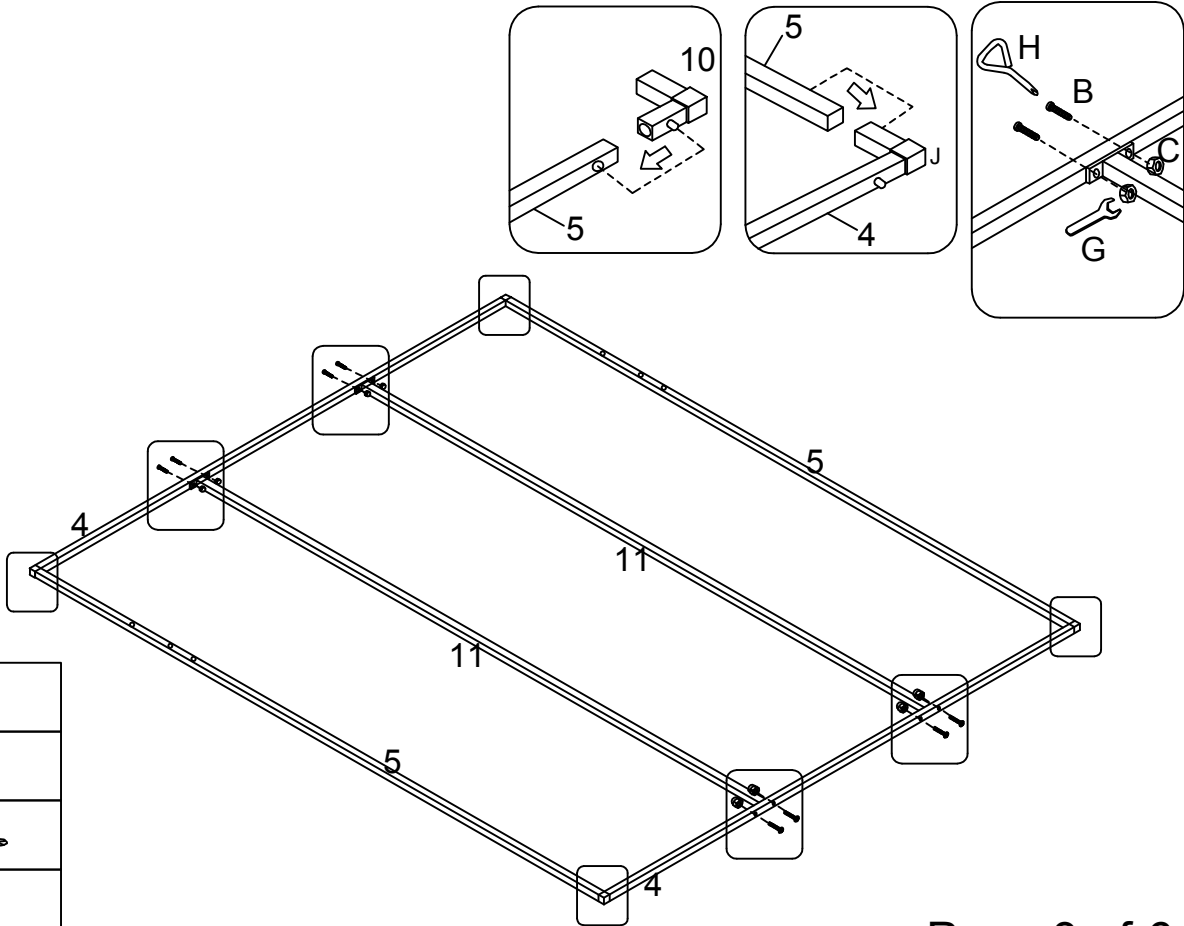

10.x4	
G.x1	
H.x1	
C.x8	
B.x8	

Step3

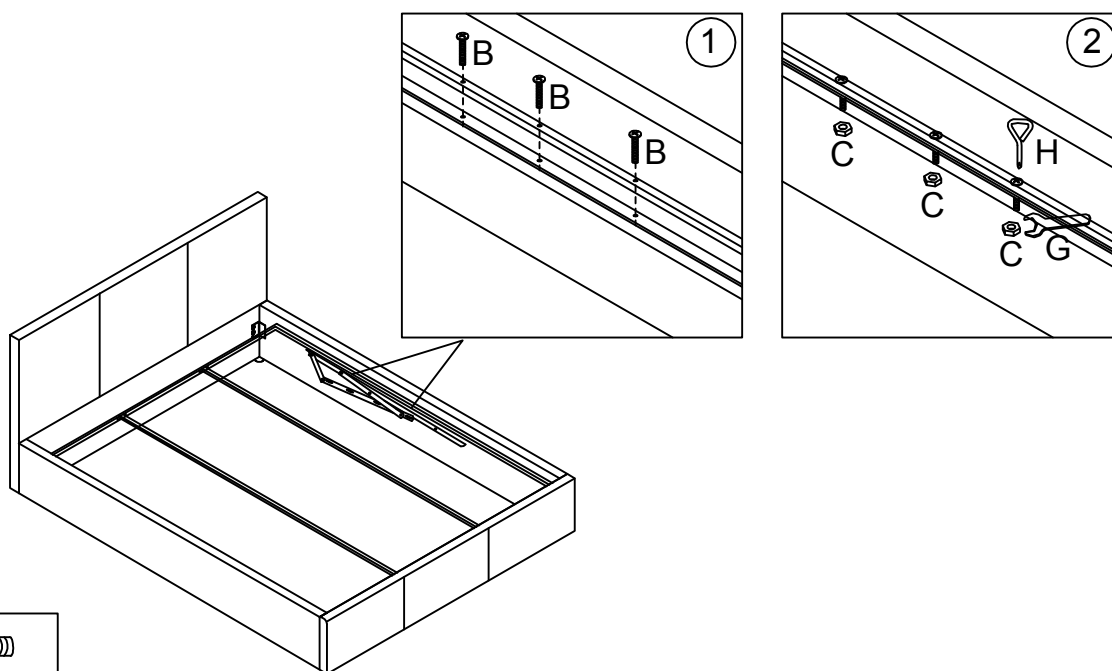


B.x6 

G.x1 

C.x6 

H.x1 

Step4

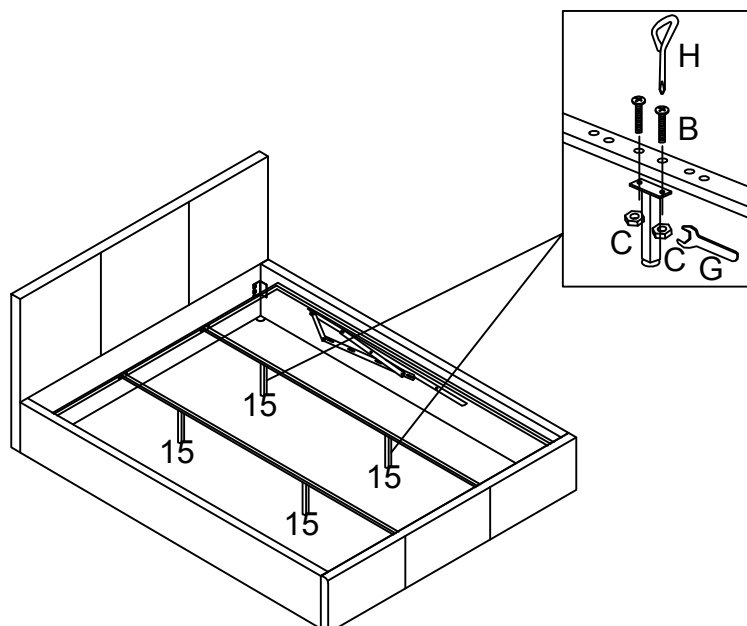


B.x8 

G.x1 

C.x8 

H.x1 

Step5

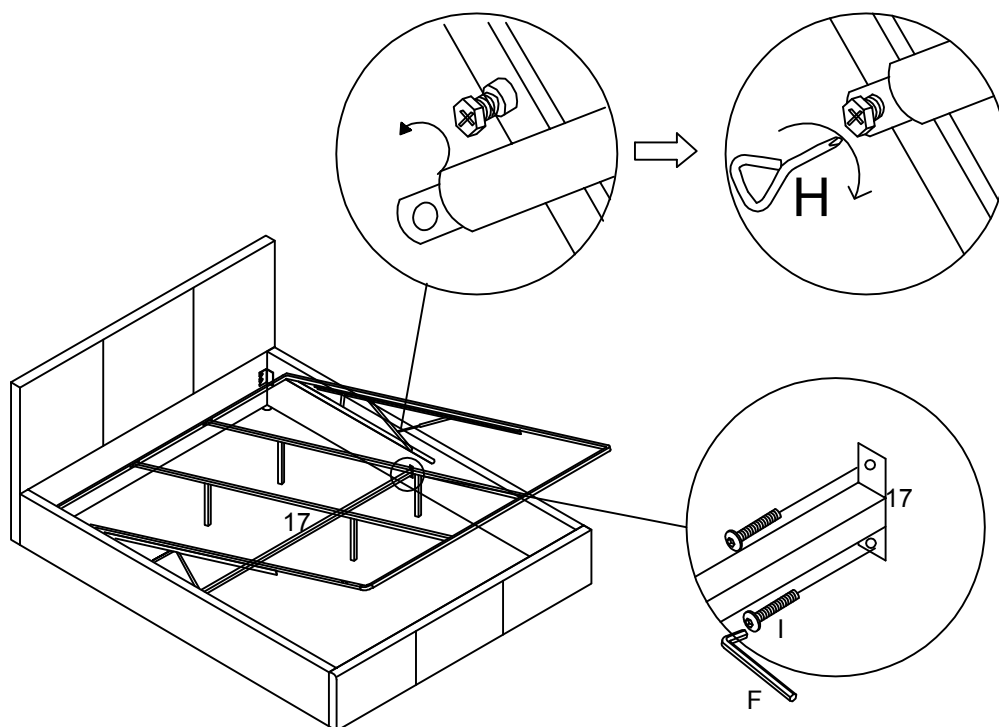

F.x1




I.x4



H.x1



Step6

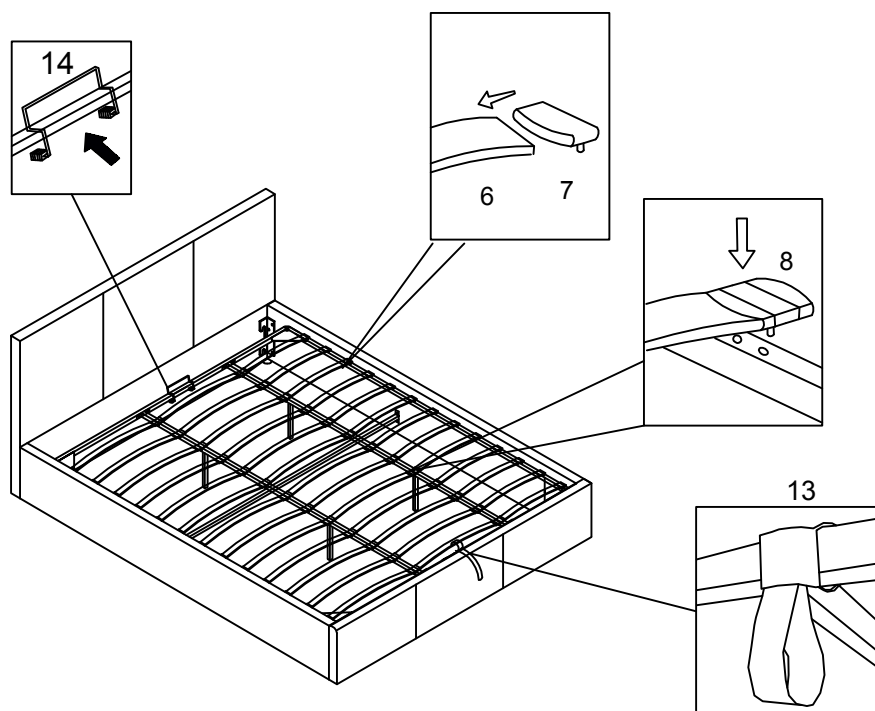

13.x1



14.x1



6.x39




7.x26



8.x26




Step7

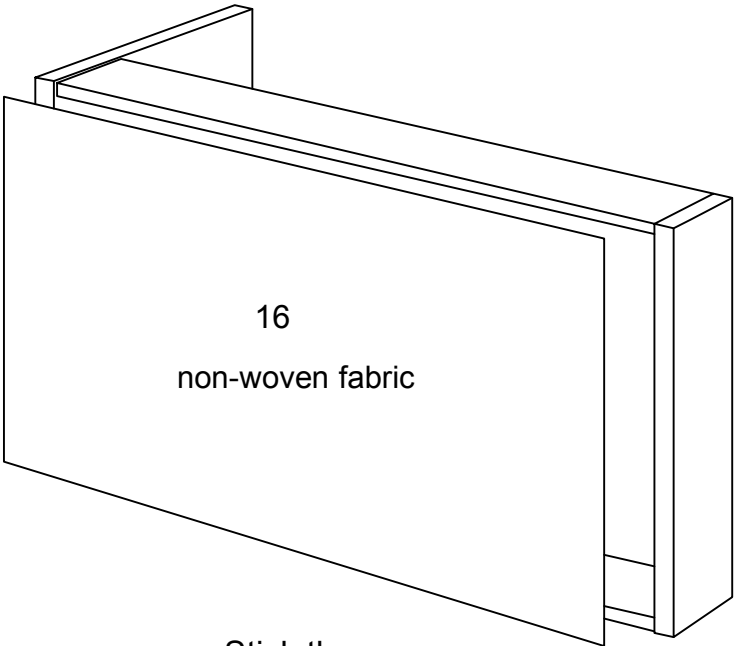

Stick the non-woven fabric on bottom and then assemble the 4 foot

J.x4	
16.x1	
9.x4	
H.x1	

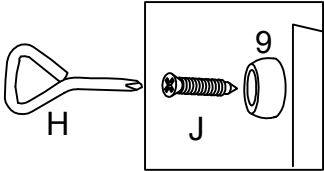

Step8

