


CRIADO 2 CAJONES ROBLE

ASSEMBLY INSTRUCTIONS

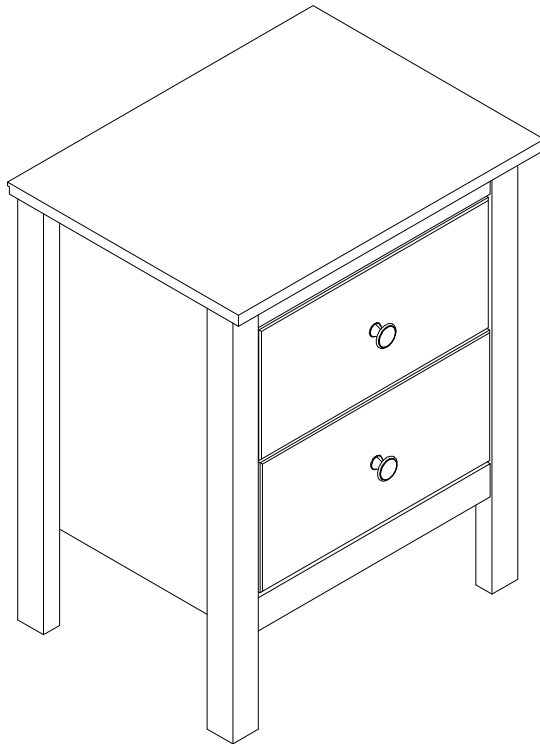

IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

CUIDADOS Y MANUTENCION

Por favor, lea atentamente:

1- NO mantener este producto cerca de radiadores, chimeneas o expuesto al sol. Es recomendable mantener una temperatura ambiente estable.

2-La madera es un producto natural. Pueden haber algunas variaciones de tonalidad.



3- No colocar productos húmedos directamente sobre el mueble. Tampoco muy fríos, ni muy calientes, ya que pueden dejar marcas.

4- Para la limpieza general, utilizar un trapo limpio y seco. No utilizar detergentes ni productos de limpieza.

* For your future reference
Order Number should be here



After assembly use an alcohol
based product/cleaner
to erase the numbers printed
on the parts that are visual.

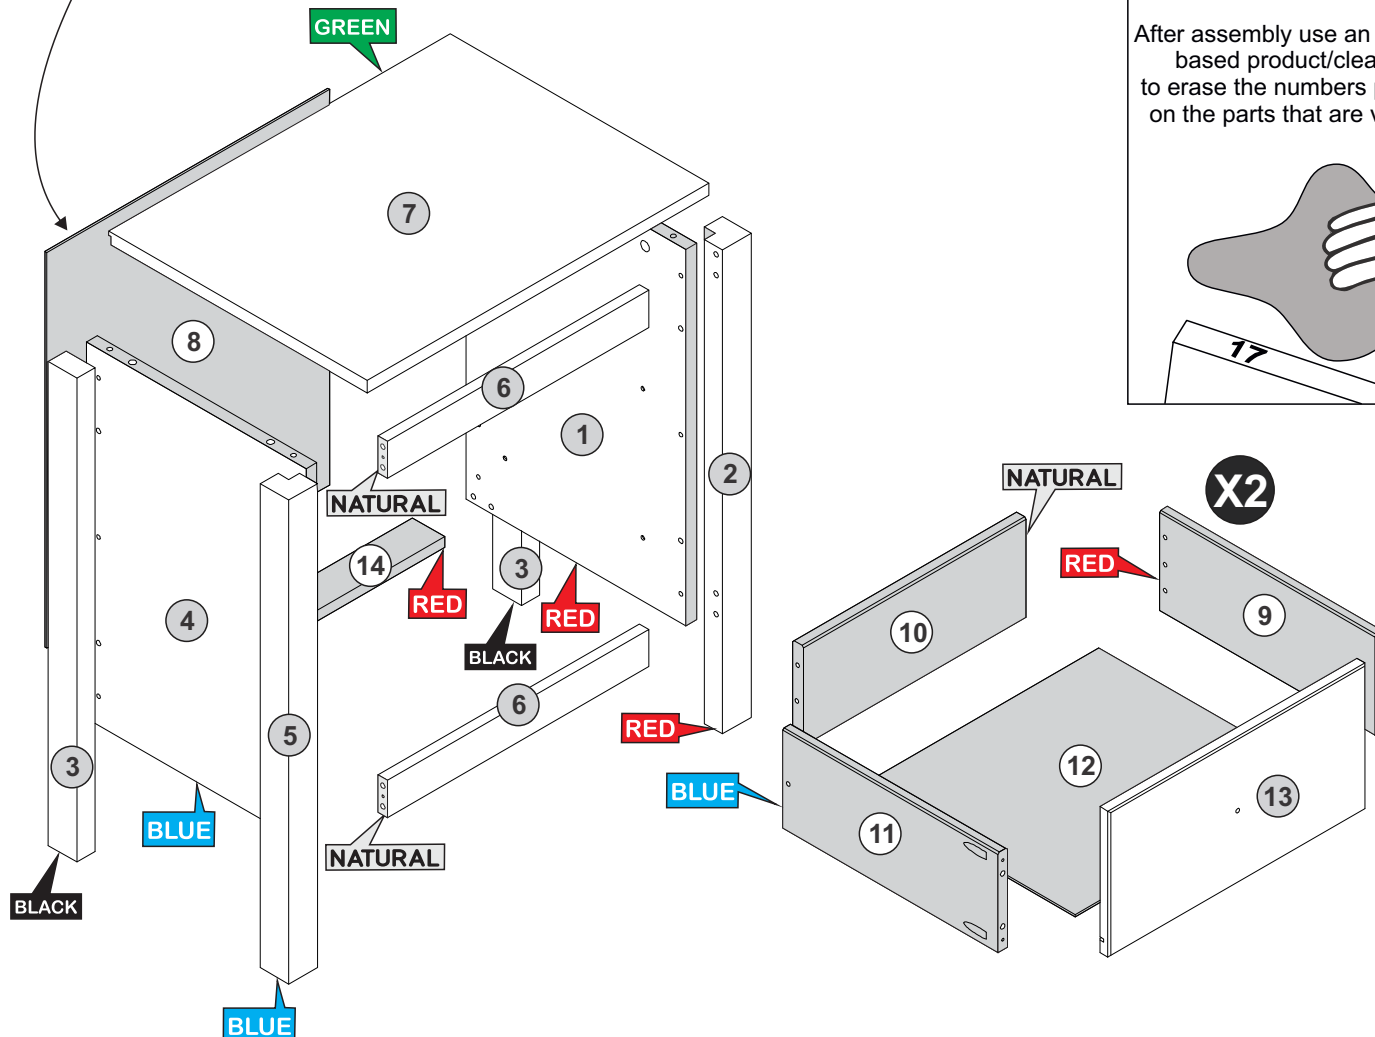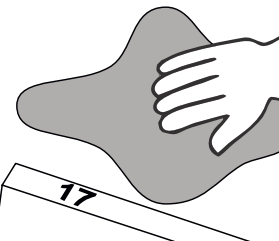








PARTS LIST

Please Note:

The below parts have all been stamped with the part number/color to help identify them during assembly.

Part Number	Part Description	Quantity	Carton
1	Right Side Panel - Red	1	1/1
2	Right Front Upright - Red	1	1/1
3	Rear Upright - Black	2	1/1
4	Left Side Panel - Blue	1	1/1
5	Left Front Upright - Blue	1	1/1
6	Crossbeam - Natural	2	1/1
7	Top Panel - Green	1	1/1
8	Back Panel	1	1/1
9	Right Drawer Side - Red	2	1/1
10	Drawer Back Panel - Natural	2	1/1
11	Left Drawer Side - Blue	2	1/1
12	Drawer Bottom	2	1/1
13	Drawer Front	2	1/1
14	Back Crossbeam - Red	1	1/1

FITTINGS LIST

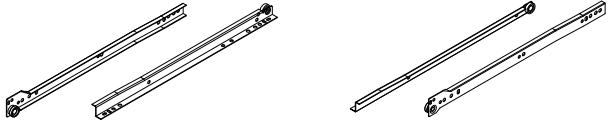A +/-2  Dowel Ø6,0 x 30mm (40x)	B +/-1  Cam Bolt (4x)	C +/-1  Flan Head Screw Ø3,5x25mm (12x)	D +/-1  Flat Head Screw Ø6,0 x 10mm (8x)
E +/-2  Pan Head Screw Ø4,0x30mm (14x)	F +/-1  Cam Nut (4x)	G +/-2  Nail 10 x 10 (28x)	H +/-2  Flat Head Screw Ø3,5x16mm (16x)
I  Handle (2x)	J +/-1  Flan Head Screw ØM4x22mm (2x)	K  Drawer Runners (2x)	
L  Glue (1x)	M +/-1  Flan Head Screw Ø4,0x40mm (4x)		

TIPS FOR FITTINGS CAM-LOCKS


WHEN FITTING A CAM NUT. ENSURE STARTING POSITION IS CORRECT BEFORE YOU INSERT CONNECTING CAM BOLT TURN CLOCKWISE UNTIL SECURE




CORRECT




WRONG



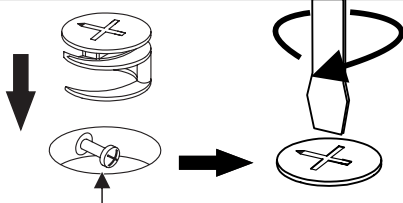

Cam bolt head needs to be in centre

TOOLS REQUIRED

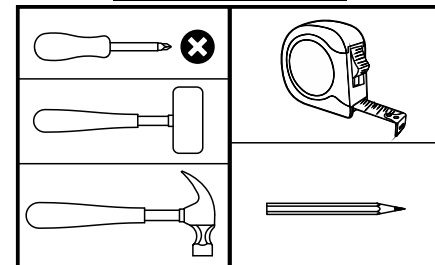

CAMBOLT

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example beside)

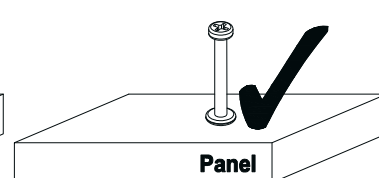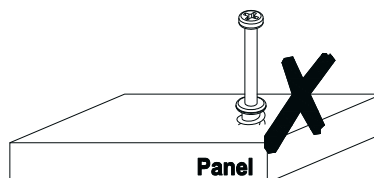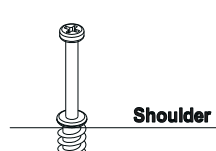

STEP 1

PARTS REQUIRED

2 - RIGHT FRONT UPRIGHT - RED x1

3 - REAR UPRIGHT - BLACK x2

5 - LEFT FRONT UPRIGHT - BLUE x1

6 - CROSSBEAM - NATURAL x2

14 - BACK CROSSBEAM - RED x1

HARDWARE REQUIRED



A  20

Ø6,0 x 30mm

L  01

Glue

TOOLS REQUIRED

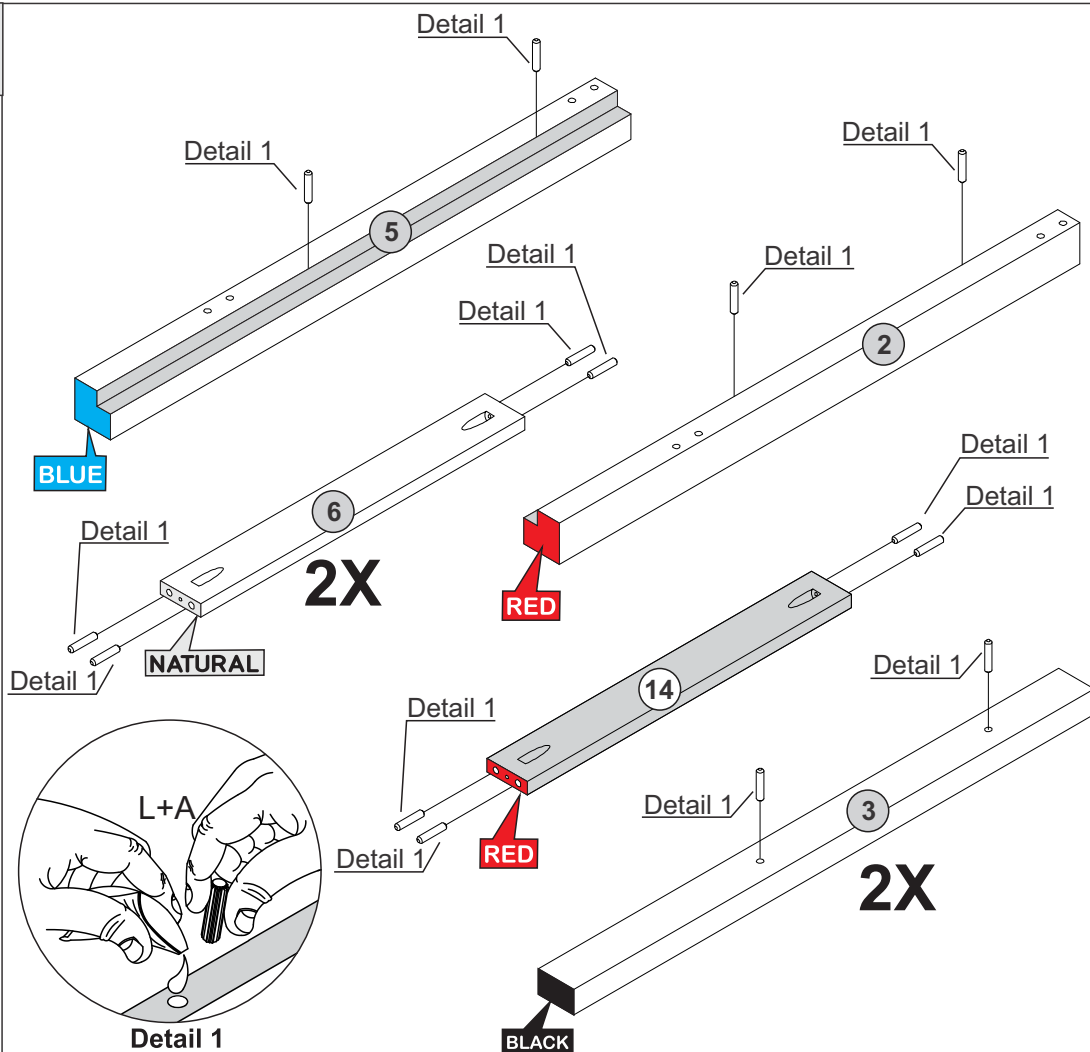


STEP 2

PARTS REQUIRED


7 - TOP PANEL - GREEN x1

HARDWARE REQUIRED

B  04

Cam Bolt

TOOLS REQUIRED

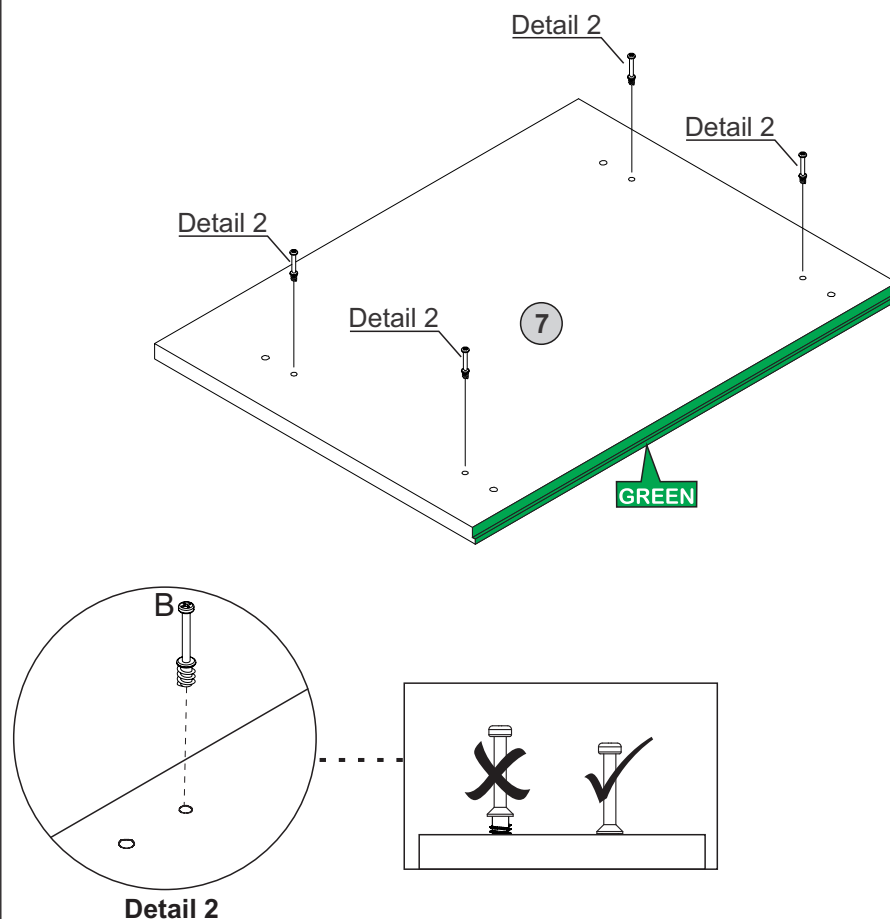

STEP 3

PARTS REQUIRED



4 - LEFT SIDE PANEL - BLUE x1

5 - LEFT FRONT UPRIGHT - BLUE x1

HARDWARE REQUIRED

C  03
Ø3,5 x 25mm


TOOLS REQUIRED

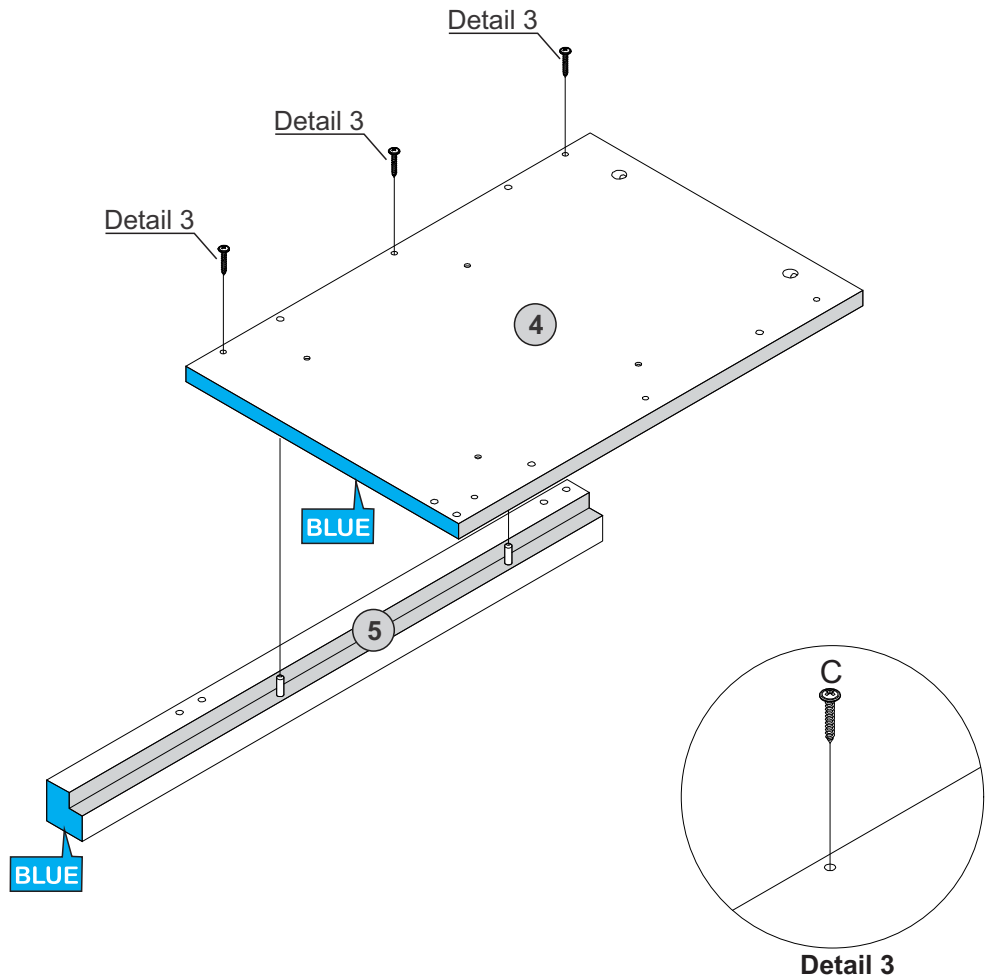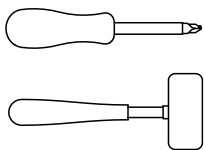

STEP 4

PARTS REQUIRED



3 - REAR UPRIGHT- BLACK x1

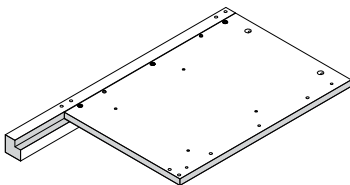

HARDWARE REQUIRED


C  03
Ø3,5 x 25mm

TOOLS REQUIRED

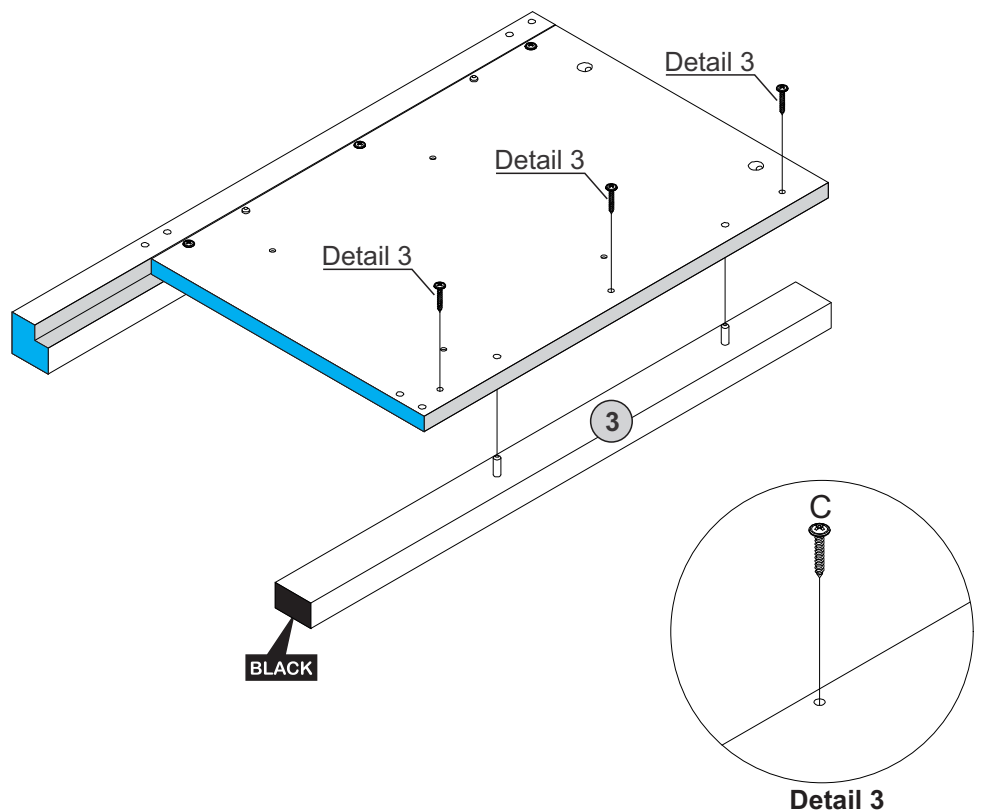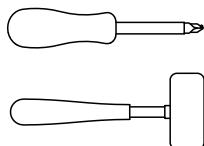

STEP 5


PARTS REQUIRED

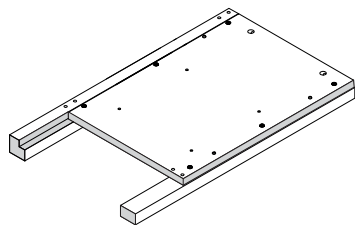

HARDWARE REQUIRED






A  02
Ø6,0 x 30mm

D  04
Ø6,0 x 10mm

K  02
Left

L  01
Glue

TOOLS REQUIRED

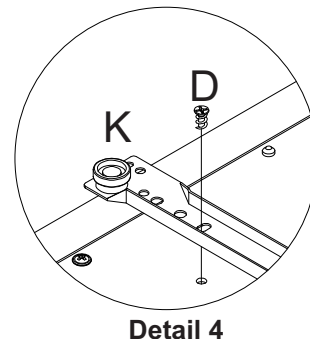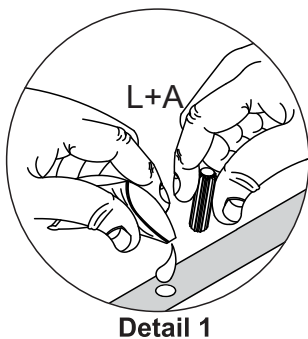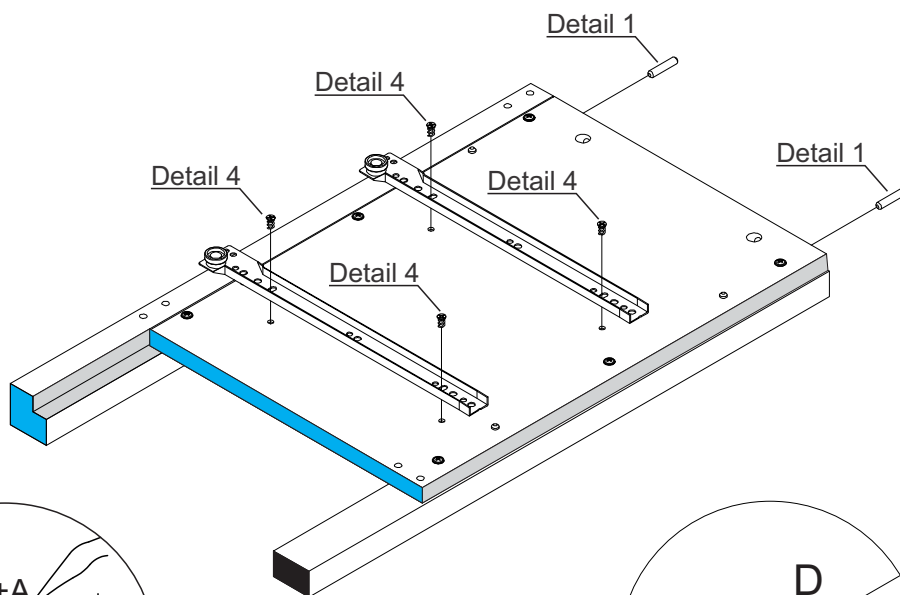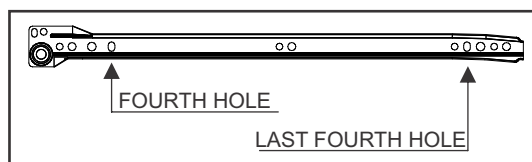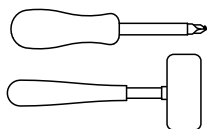


STEP 6

PARTS REQUIRED




1 - RIGHT SIDE PANEL - RED x1

2 - RIGHT FRONT UPRIGHT - RED x1

HARDWARE REQUIRED

C  03
Ø3,5 x 25mm


TOOLS REQUIRED

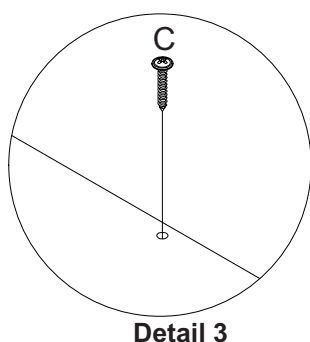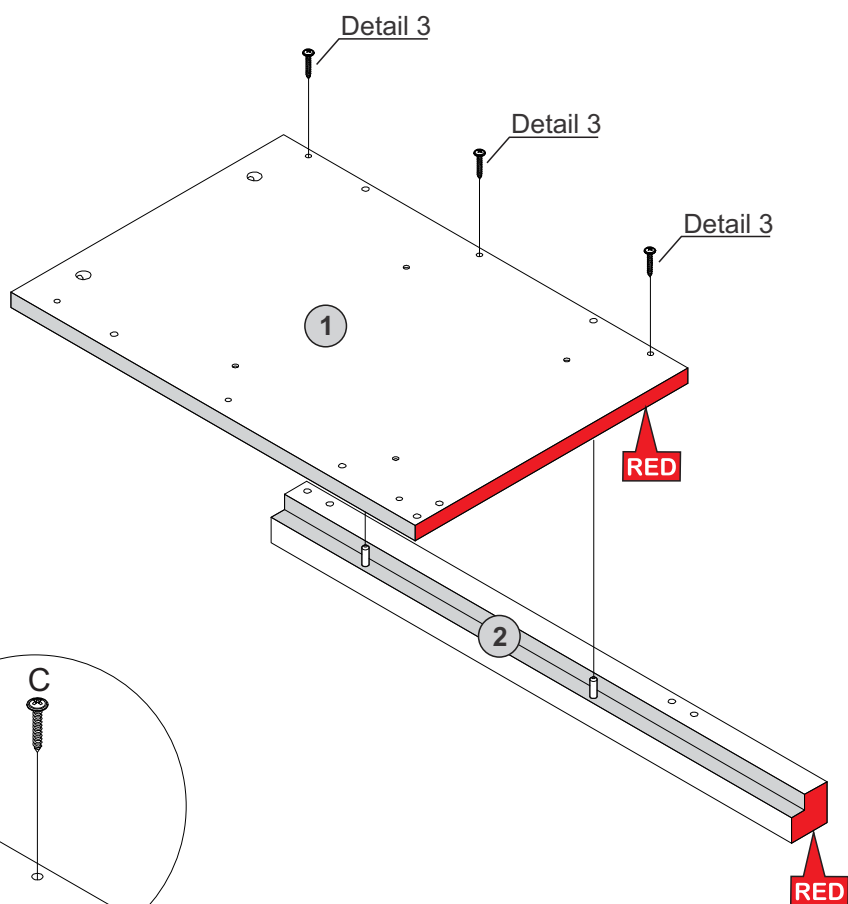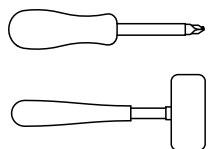

STEP 7

PARTS REQUIRED



3 - REAR UPRIGHT- BLACK x1

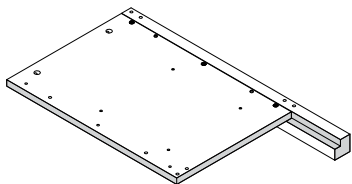

HARDWARE REQUIRED


C  03
Ø3,5 x 25mm

TOOLS REQUIRED

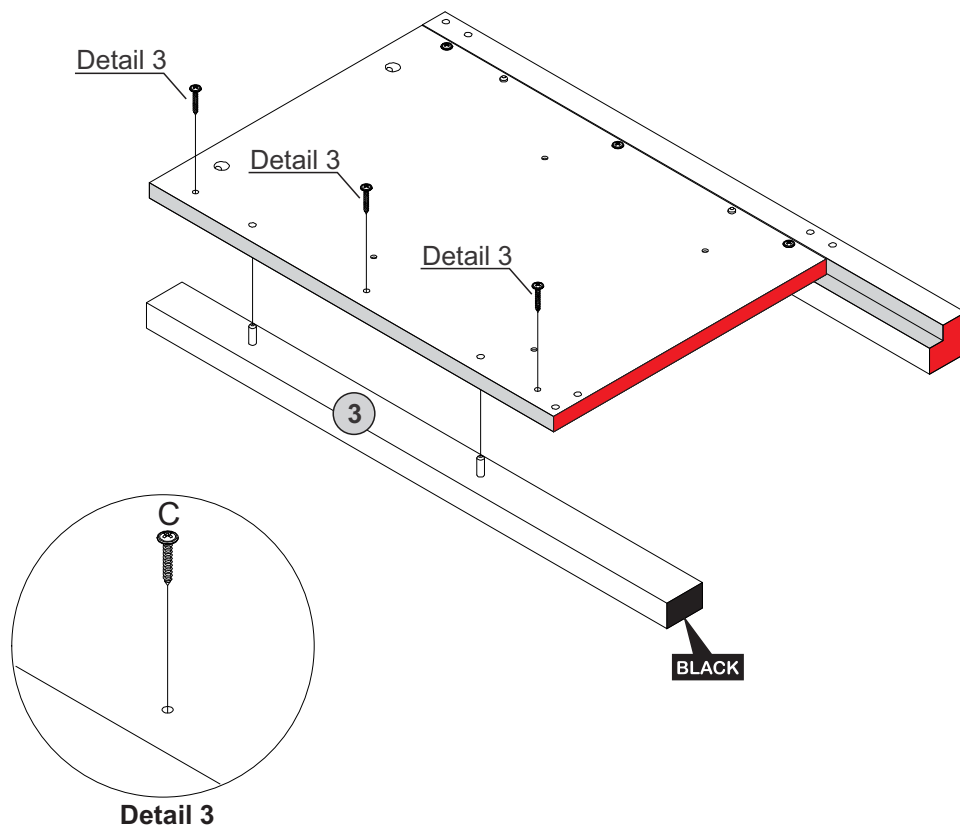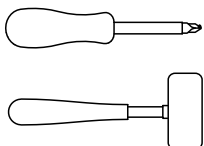

STEP 8

PARTS REQUIRED

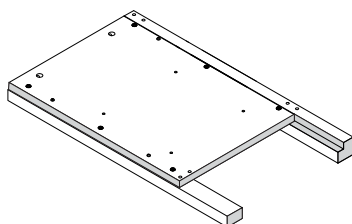

HARDWARE REQUIRED



A  02
Ø6,0 x 30mm

D  04
Ø6,0 x 10mm

K  02
Right

L  01
Glue

TOOLS REQUIRED

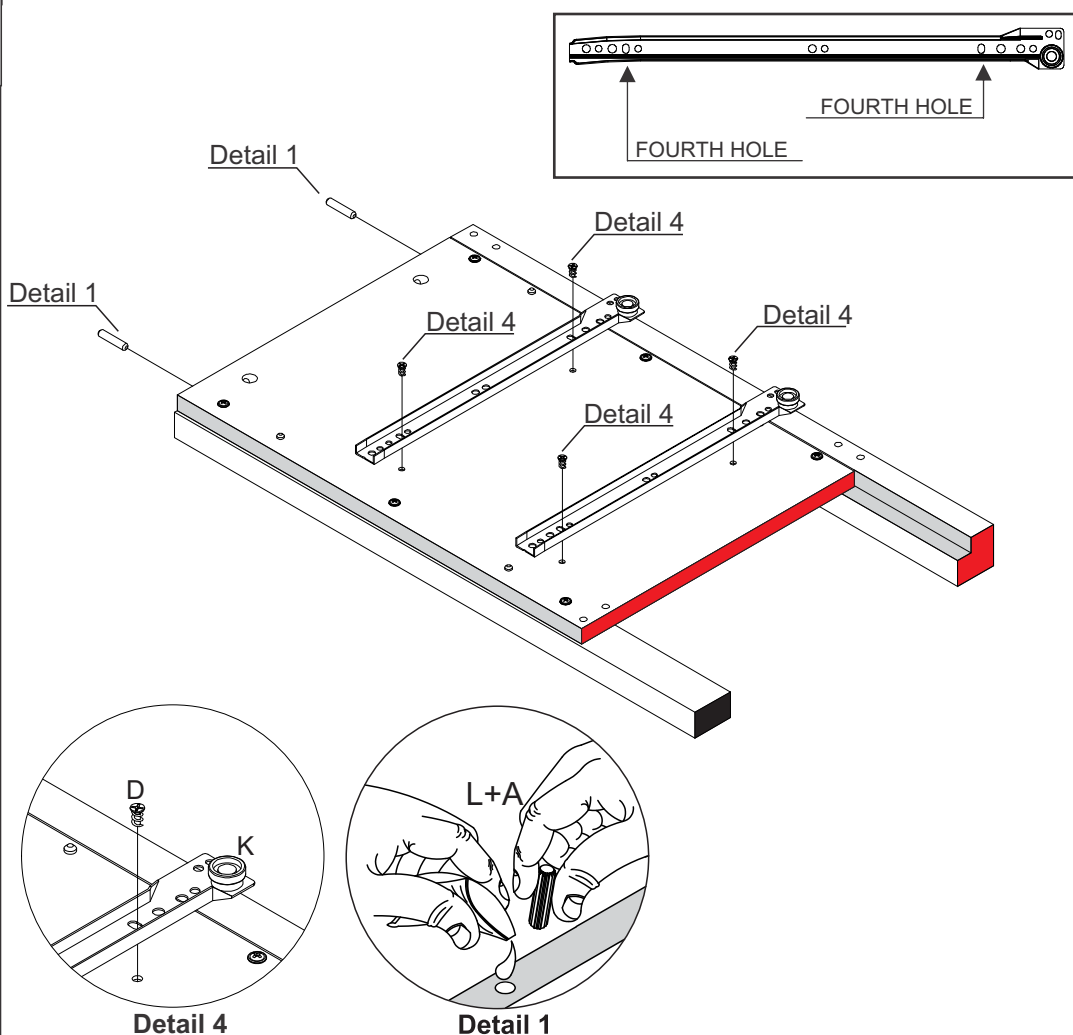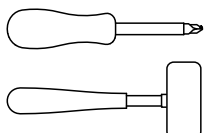


STEP 9

PARTS REQUIRED




6 - CROSSBEAM - NATURAL x2

14 - BACK CROSSBEAM - RED x1

HARDWARE REQUIRED



E  03
Ø4,0 x 30mm

TOOLS REQUIRED

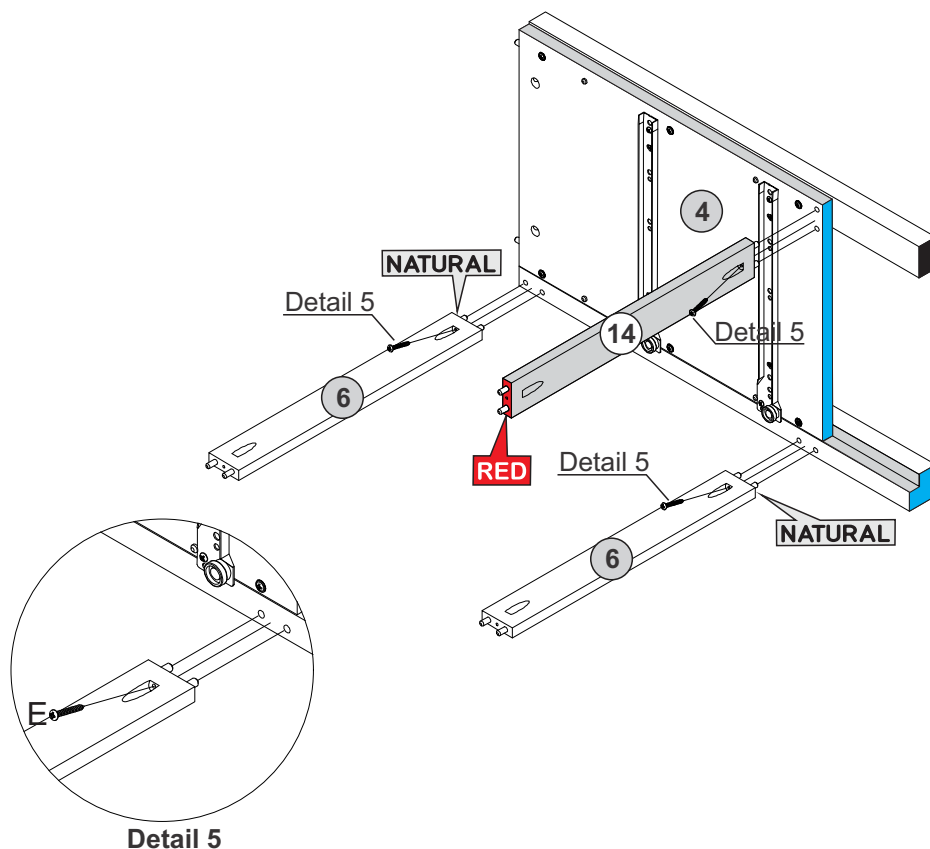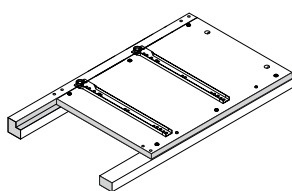


STEP 10


PARTS REQUIRED

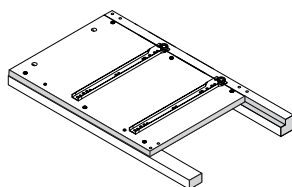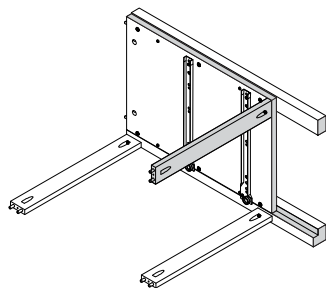

HARDWARE REQUIRED

E  03
Ø4,0 x 30mm


TOOLS REQUIRED

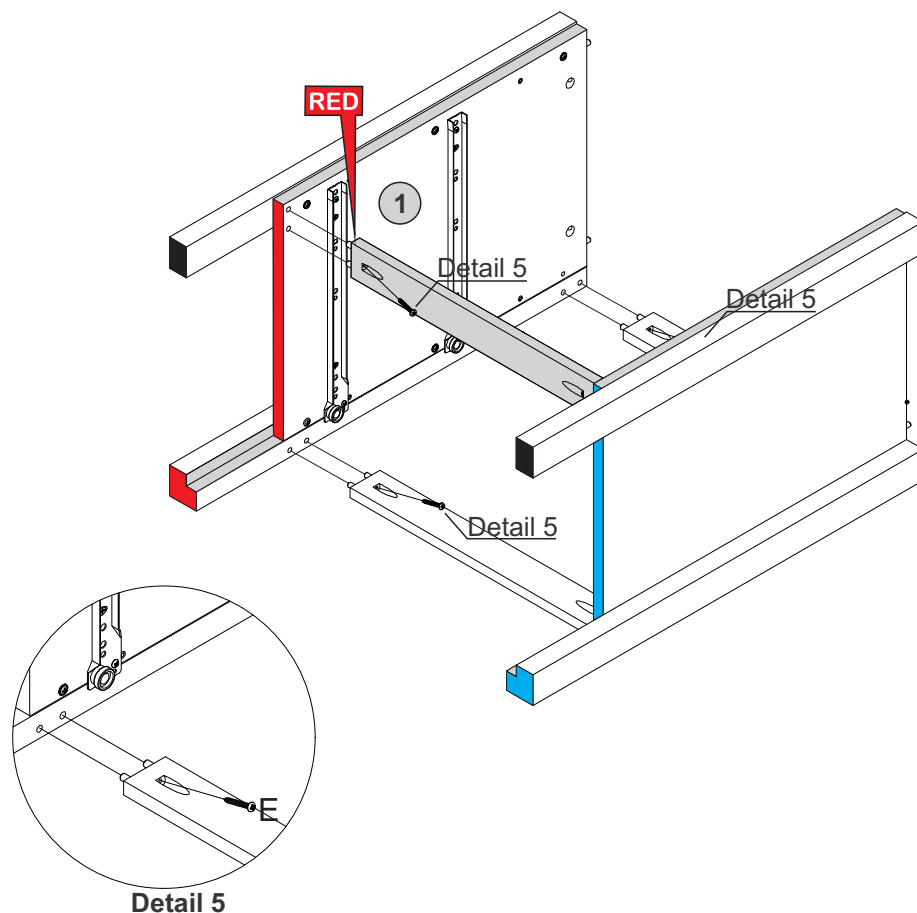

STEP 11

PARTS REQUIRED



7 - TOP PANEL - GREEN x1

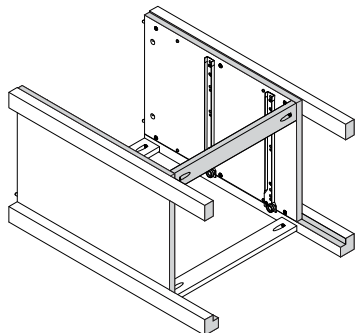

HARDWARE REQUIRED

F  04


TOOLS REQUIRED

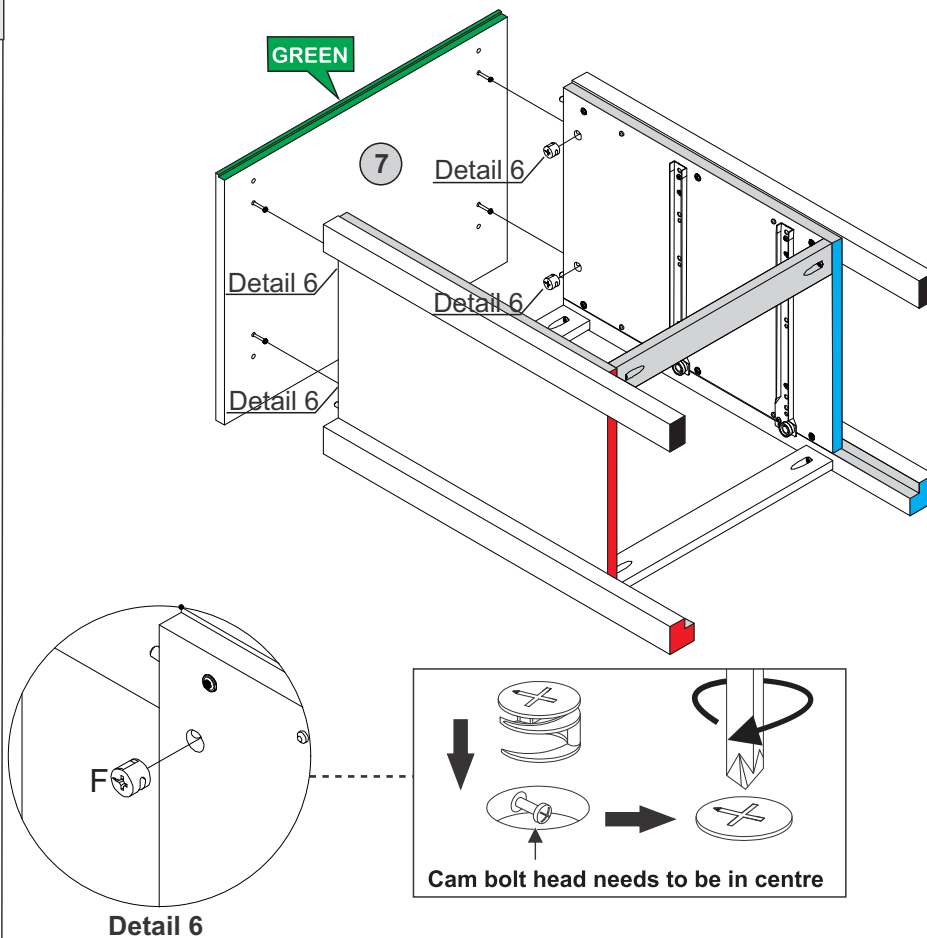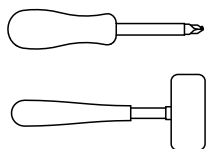


STEP 12

PARTS REQUIRED



8 - BACK PANEL x1

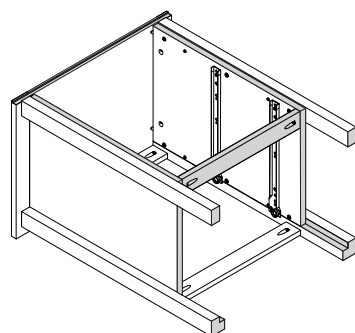

HARDWARE REQUIRED

G  14
Ø10 x 10mm

TOOLS REQUIRED

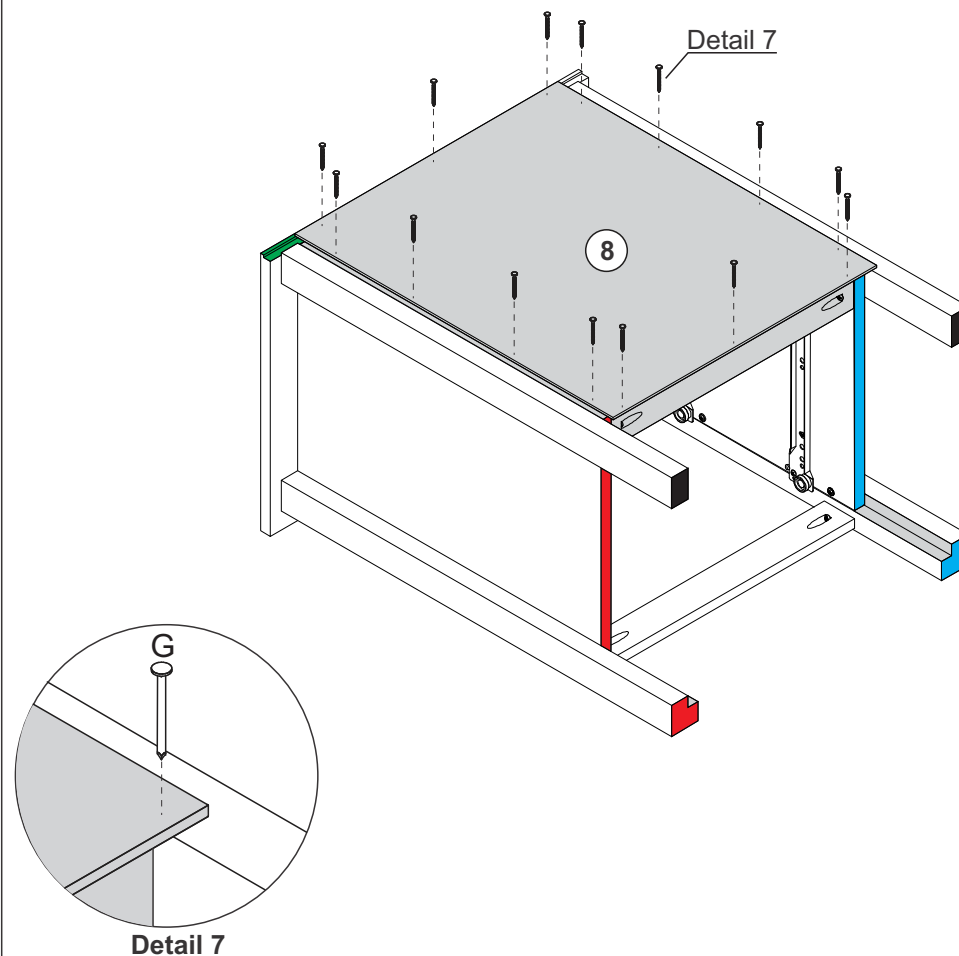

STEP 13

PARTS REQUIRED

9 - RIGHT DRAWER SIDE - RED x2

10 - DRAWER BACK PANEL - NATURAL x2



11 - LEFT DRAWER SIDE - BLUE x2

HARDWARE REQUIRED

A  16
Ø6,0 x 30mm

L  01

TOOLS REQUIRED

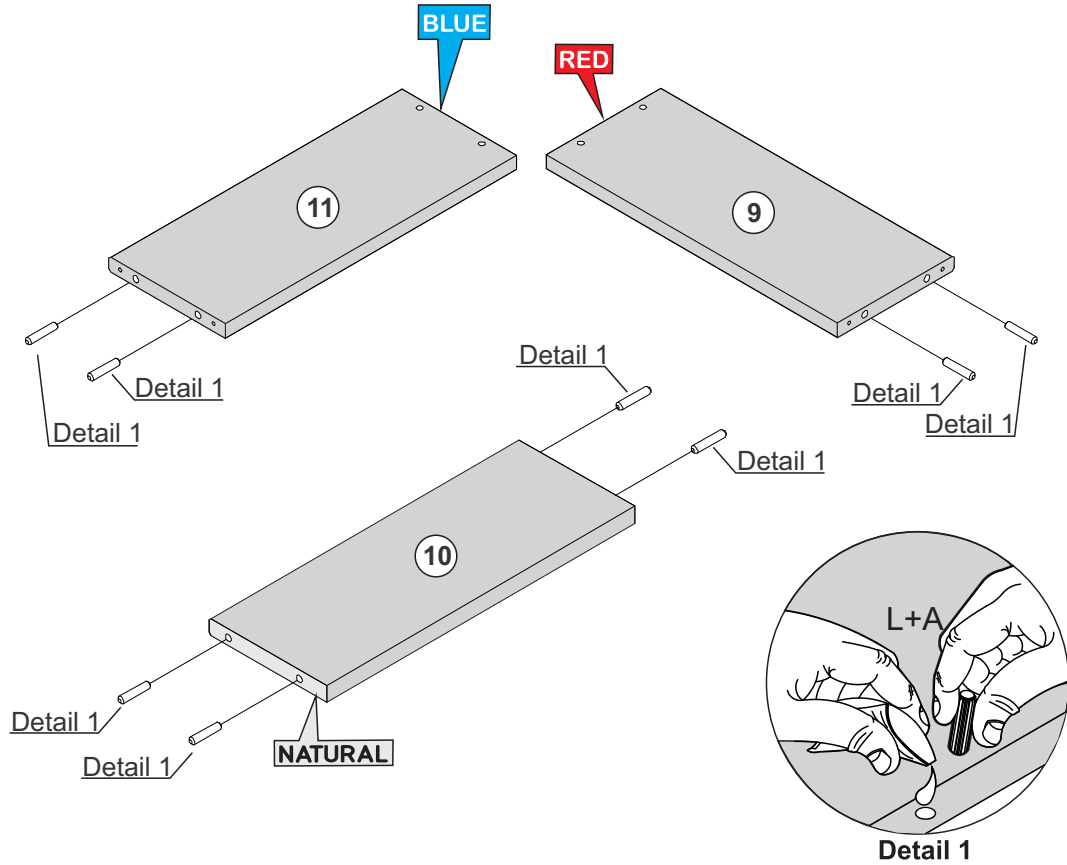

STEP 14

PARTS REQUIRED

9 - RIGHT DRAWER SIDE - RED x2



10 - DRAWER BACK PANEL - NATURAL x2

11 - LEFT DRAWER SIDE - BLUE x2

HARDWARE REQUIRED

M		04
Ø4,0 x 40mm		


TOOLS REQUIRED

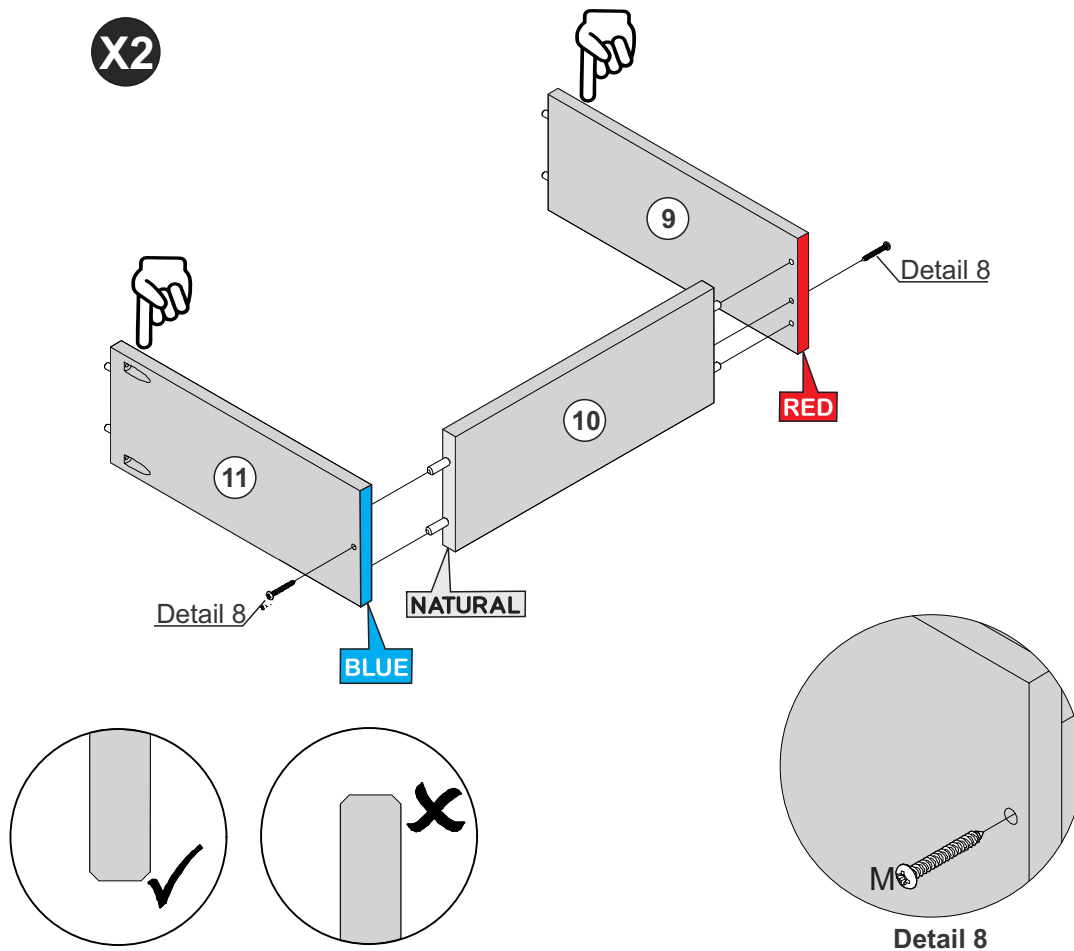


STEP 15

PARTS REQUIRED


13- DRAWER FRONT x2

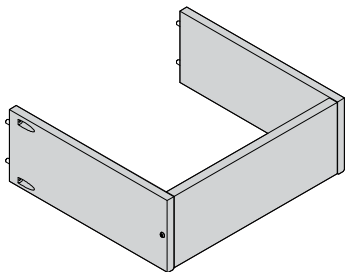



HARDWARE REQUIRED

E  08
Ø4,0 x 30mm


TOOLS REQUIRED



X2

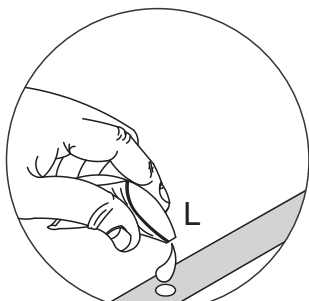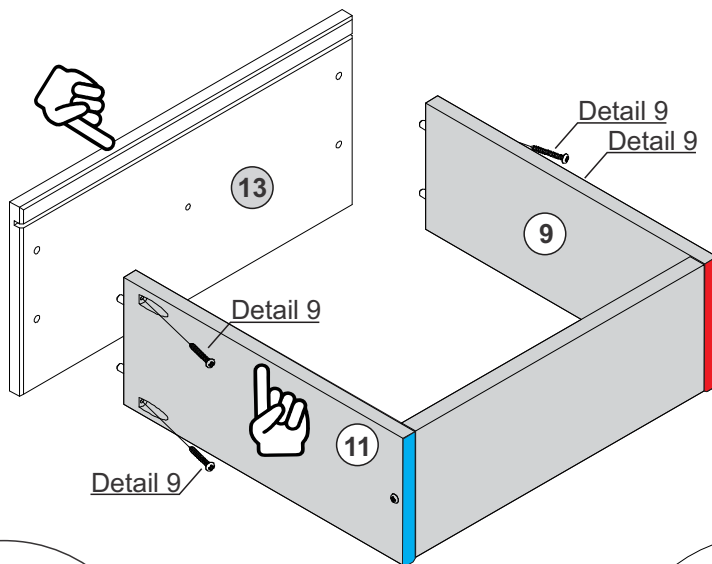

Detail 1

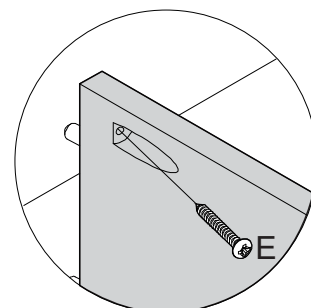


Detail 9

STEP 16

PARTS REQUIRED


12 - DRAWER BOTTOM x2

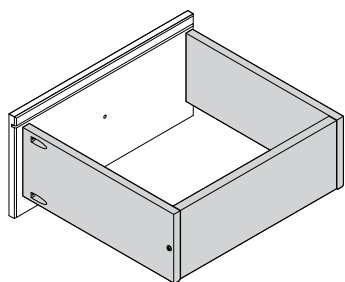



HARDWARE REQUIRED

G  14
Ø10 x 10mm





TOOLS REQUIRED



X2

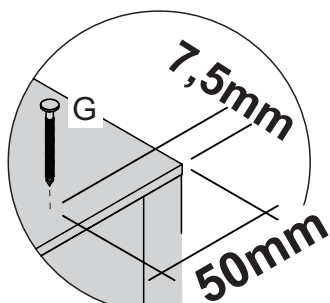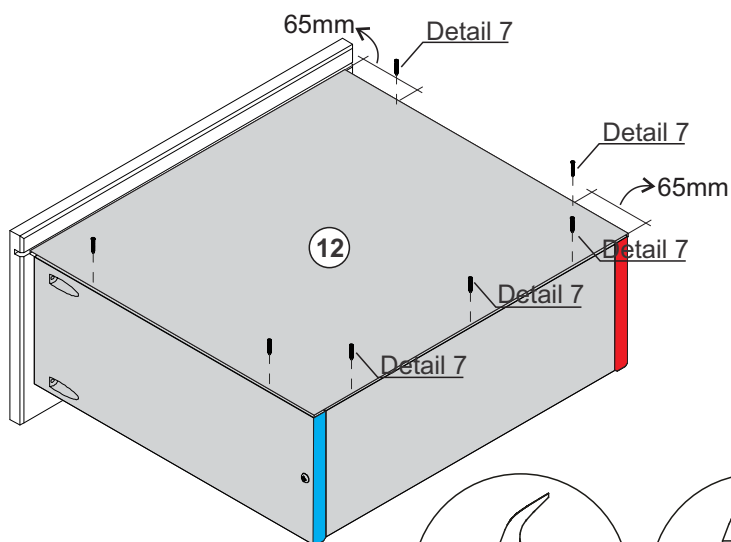


Detail 7

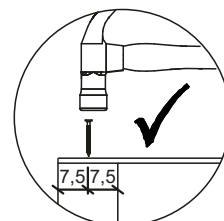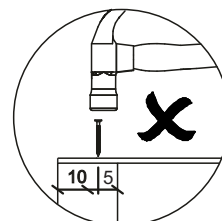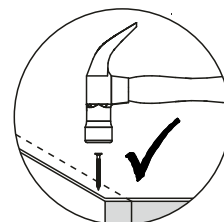
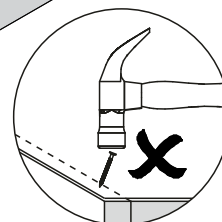


STEP 17


PARTS REQUIRED

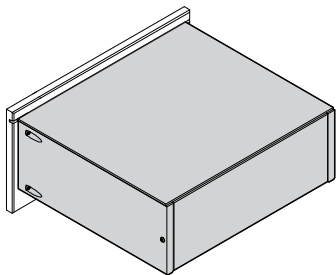



HARDWARE REQUIRED



TOOLS REQUIRED




X2

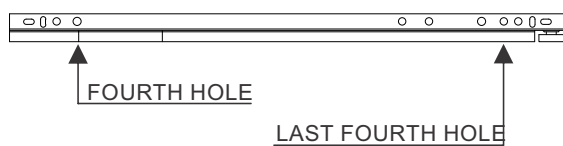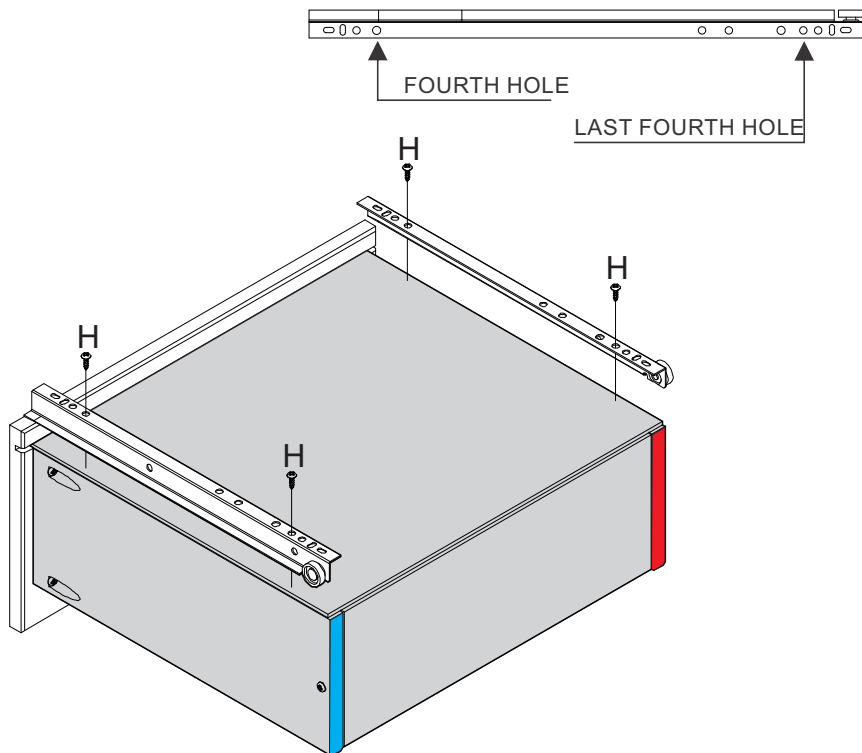

STEP 18


PARTS REQUIRED

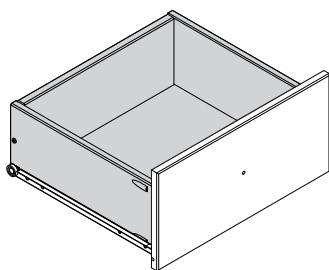



HARDWARE REQUIRED



TOOLS REQUIRED




X2

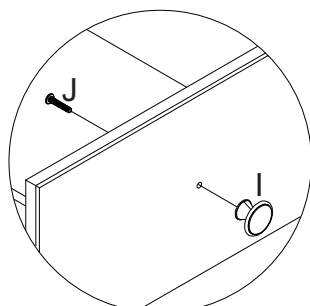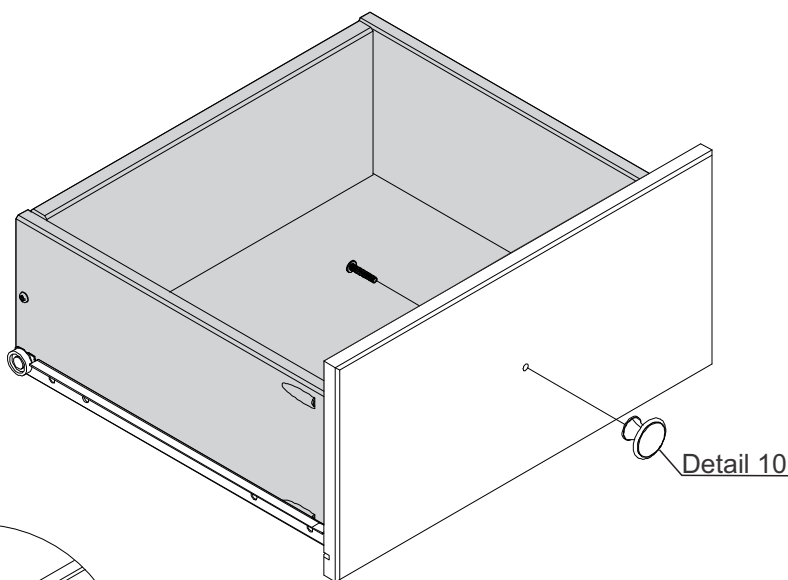


Detail 10

STEP 19


PARTS REQUIRED

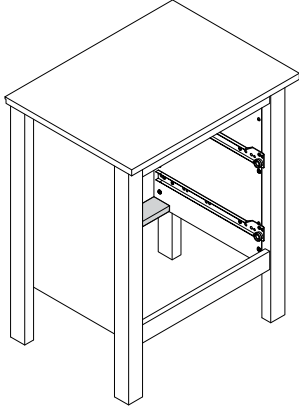


HARDWARE REQUIRED




TOOLS REQUIRED

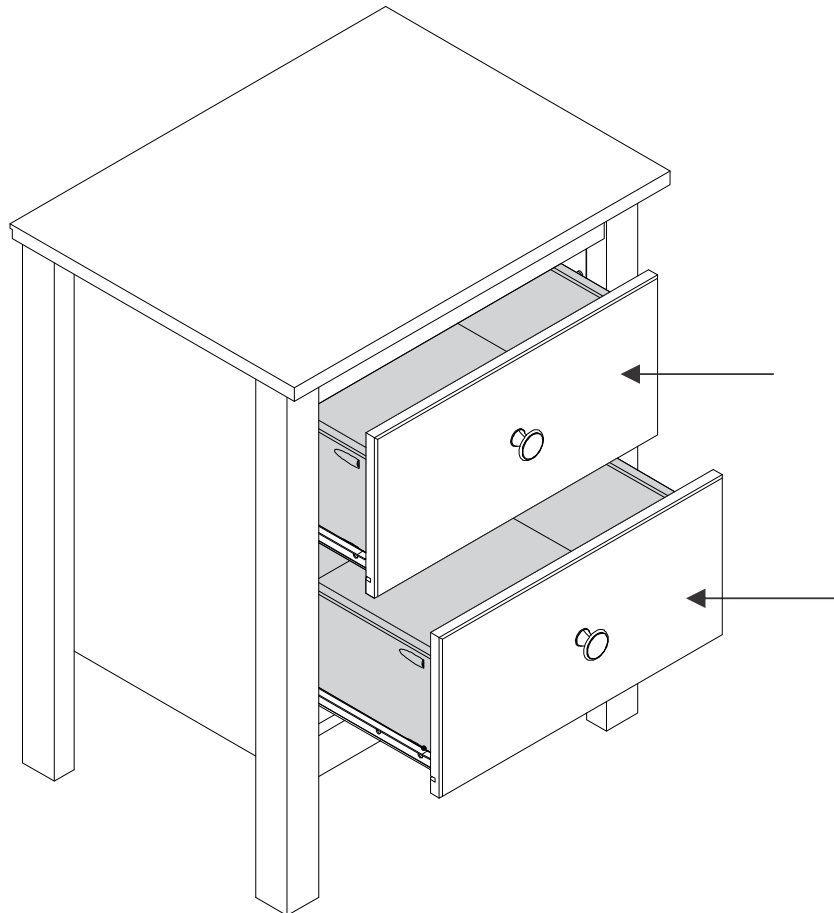

Drawer Adjustment

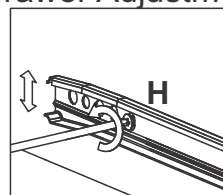

Drawer Lock

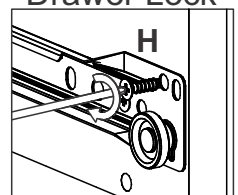

Detail 11