

BRUNOY Adjustable Bed Frame Manual



Safety & Precautions

ATTENTION

IMPORTANT SAFETY INSTRUCTIONS.

PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE USING THIS PRODUCT.

PROPER OPERATION OF YOUR ADJUSTABLE BED IS NECESSARY TO ENSURE THE LONG LIFE AND DURABILITY YOU EXPECT FROM A HIGH QUALITY PRODUCT.

ELECTRICAL SAFETY

Always unplug this adjustable bed frame from the electrical outlet before any cleaning or maintenance of the bed frame. To safely disconnect, make sure all controls are in the off position, then remove the plug from the outlet. Keep cord away from heated surfaces. Keep air openings free of lint, hair, debris - never operate when air openings are blocked. Never drop or insert any object into any opening. Use only indoors. Cease use of this bed frame and contact the customer service for repair if: (1) it has a damaged cord or plug, (2) it is not working properly, (3) it has been dropped or damaged, or (4) it has been dropped into water.

ATTENTION FOR MOVING PARTS

Keep body parts clear of all moving parts to avoid injury while the product is in use. Keep moving parts clear of obstruction during operation.

GROUNDING SAFETY

To reduce the risk of electric shock, electrical fire, or faulty operation of this product, your adjustable bed features a polarized plug meant to be used only with a grounded electrical outlet. If this plug does not fit into your outlet, contact a qualified electrician to install a properly grounded outlet. Failure to use a properly grounded outlet for this product will compromise this important grounding safety feature. The use of adapters is not recommended unless the outlet is checked by a qualified electrician to ensure the proper grounding of the adapter. Please note: Unauthorized modifications to this product could void the electrical portion of your warranty.

WARRANTY WARNING

Any opening or tampering with the control box, motors or hand controls (with the exception of the battery compartment if equipped) will void the warranty. Only those authorized may conduct repairs or part replacement on your adjustable bed.

FOR OPTIMAL SAFETY, YOUR ADJUSTABLE BED SHOULD BE PLUGGED INTO A SURGE PROTECTOR (not supplied with this Adjustable Bed).

IN-HOME USE ONLY

This Adjustable Bed is designed exclusively for in-home use.

HOSPITAL DISCLAIMER:

It is NOT designed for hospital use and is NOT designed to meet hospital standards. Do not use this bed near explosive gases.

IMPORTANT SAFETY FEATURE

Weight fail safe feature: In the case that an overload of weight is placed on the head or foot mechanism, the control unit will automatically stop all functions. The control unit will automatically resume all functions 30 seconds after excess weight is removed. Weight Restrictions: For people + mattress, the recommended weight limits on our adjustable beds are: Twin XL/Split CA King: 700 pounds, FULL/Queen: 850 pounds

Locking caster feature: This adjustable bed may be equipped with special locking casters. For your safety, these casters will prevent bed movement when all casters are in the locked position. To lock casters, push down the safety latch on the caster. To resume product mobility, lift the safety latch up. Please note: If your adjustable bed is positioned on a hard floor surface such as hardwood or tile, it is strongly recommended that rubber caster cups or carpet squares are placed under the casters in addition to locking them in place. Casters will not roll when locked, but may slide on an uncarpeted surface.

RADIO FREQUENCY IS 2.400-2.4835 GHZ.

FCC compliance device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CONSUMERS WITH PACEMAKERS

It is possible that the (optional) vibrating feature of this bed may be misinterpreted by some pacemakers as movement and/or exercise. This is common with any product that produces a vibrating motion, and may or may not affect your pacemaker. Please consult your physician with any concerns.

PRODUCT RATINGS

Lift Motor Restrictions: The lift motors in this bed are NOT designed to operate continuously for more than three (3) minutes over a thirty (30) minute time period, or approximately 10% duty cycle. To ensure reliable functionality and full life of this product, do not attempt to exceed these limits.

NOTE: Attempting to circumvent or exceed this rating will shorten the life expectancy of the product and may void the warranty.

NOTE: Exceeding the recommended weight restrictions could damage your adjustable bed and void your warranty.

The structure of the bed will support the recommended weight when distributed evenly across the bed. The head and foot sections are not designed to individually support or lift this amount of weight. For optimal performance, entering and exiting the adjustable bed with the bed in the flat or level position is recommended.

SMALL CHILDREN AND PETS WARNING

Immediately dispose of all packing materials as it can pose a smother risk to small children and pets. Injury could occur also if children or pets are permitted to play on or under the bed. Do not allow children to operate this bed without adult supervision.

LIFT WARNING

DO NOT SIT ON THE HEAD OR FOOT SECTIONS WHILE IN THE RAISED POSITION, OR DURING LIFT OR LOWERING CYCLES

MOVING AFTER INSTALLATION

Do not place adjustable bed vertically on its head or foot sections. This may cause injury to persons or damage to the base. Two people are required for moving this base due to its heavy weight.

SAFETY

In the case that an overload of weight is placed on head or foot mechanism, the control unit will automatically stop all functions. The control unit will automatically resume all functions 30 seconds after excess weight is removed.


- The input transformer voltage is 110-240V~, 50/60Hz, 1.5A, the output voltage is 29V 1.8A. In the case of a short circuit, a fuse on the transformer will blow to protect the electrical equipment (Fuse: 1A-1.6A.).

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Important Note: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the exposure requirements and void user's authority to operate the device.

System & Parts Included

This base is zero clearance and compatible with storage beds and platform beds. Simply remove the adjustable legs and place the base on your storage/platform bed.

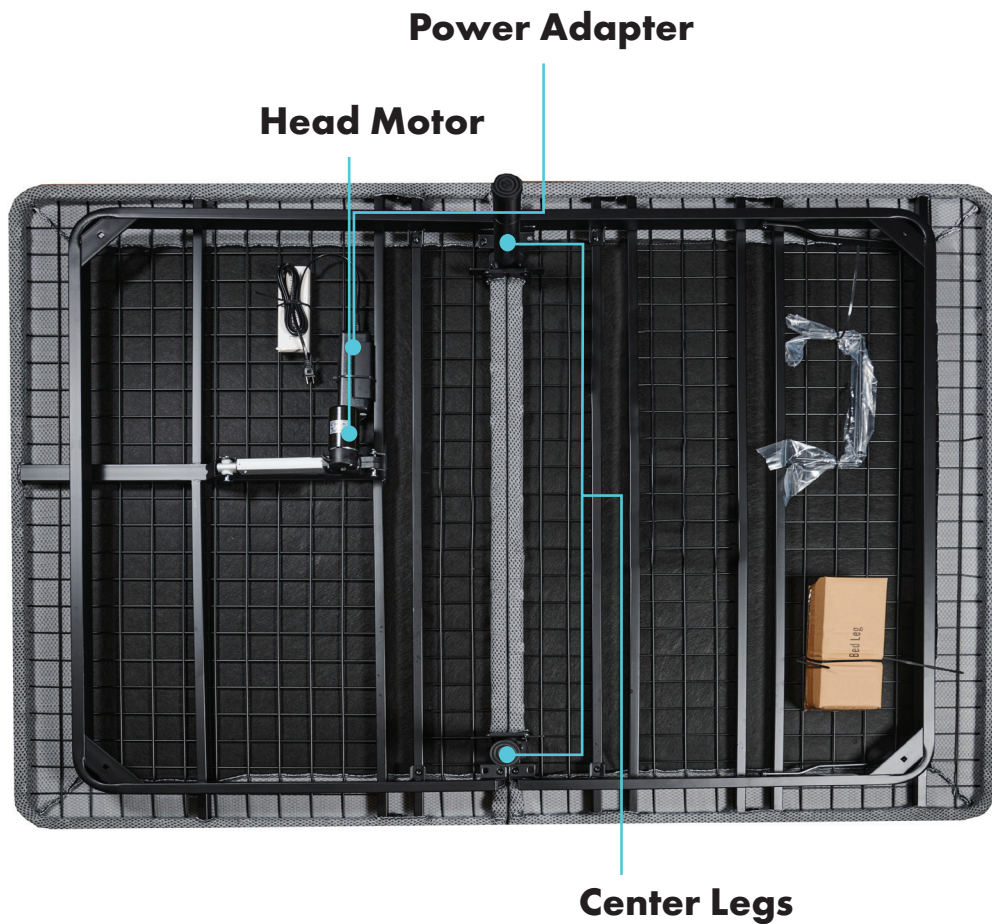

Mattress Guard

The mattress guard locks into the bed preventing the mattress from moving or falling out while the bed is moving or once you have found your preferred setting.



Remote Control

The remote has a host of features we will go over later in the manual.



Adjustable Legs

Our adjustable legs are comprised of two individual 4 " sections and one 3" section allowing you to find the perfect height for your adjustable bed. *Note the corner legs have a silver bolt, and the center legs have a black screw.



Power Adapter

Our power adapters have a compartment to house two 9-volt batteries (sold separately). In the event of a power outage the 9-volt battery backup will have enough power to get the bed back into the default lay flat position.



Bed Assembly

1.

Remove the bed from the packaging by cutting the taped edges of the box. After removing the bed from the box and the plastic wrap around it, lay the bed flat.



2.

After laying flat unfold the base. This will expose the remote, packaged leg box and mattress guards. Remove the remote, packaged leg box and foot guards by cutting their zip ties.



3.

After cutting the zip ties, remove the remote, legs and mattress guards from their boxes and packaging.



4.

To attach the center legs, remove the plastic cap from the center leg stub. Then insert the black screw on the center leg and turn the leg clockwise until tight and secure. Place the plastic cap back on the end of the center leg.



5.

To attach the corner legs, remove the silver bolt from the end of the leg. Then place the bolt inside the square bolt hole in the frame and turn the leg clockwise on the bolt until tight and secure.



6.

After the legs have been attached assembly is now complete. Team lift the bed into the correct upright position. Attach the mattress guards into the correct sockets. Your adjustable bed is ready to use.



* Platform Compatibility

If you are using your base with a platform/storage bedframe, ignore steps 4 & 5 and place your bed directly onto your platform/storage bed after step 6.

Remote Operation

Press & hold to
raise/lower head



Troubleshooting

No Power

If there is no power, check to make sure all cords are plugged in properly and the power adapter is securely plugged into the power outlet. Test the outlet to ensure it has power.



Remote Not Functioning

If remote is not functioning check to see if the bed is receiving power from the Power Adapter. If the bed has power and the remote is still not functioning, please contact customer service.



Power Adapter

The power adapter has a battery compartment for two 9volt batteries to be connected in the case of a power outage so the bed can be returned to the default flat position. The bed will not operate on the power adapter alone as the two 9volt batteries only have enough charge to return the bed to the default flat position. If the LED power indicator will not light up on the power adapter, the power adapter needs to be replaced. Contact customer service.



Lift Motor Not Functioning

If there is no response from the head or foot motor ensure all cords are securely plugged in and the base has power. If motors will still not engage contact customer support.



ADJUSTABLE BASE WARRANTY

Warranty for SF30 Adjusta Base. Thank you for your recent purchase.

The warrants this adjustable bed to the consumer who is the original purchaser (the "purchaser," subject to the terms and conditions set forth herein). This warranty begins on the "warranty commencement date" which is the date of purchase for new unused beds and the date of manufacture for beds that have been used for floor display models. Thus, on a floor model bed, the warranty is a portion of 1-year warranty. If original proof of purchase is not provided by purchaser, Beliani (International) GmbH, Baar reserves the right to determine the frame is not covered by this warranty or to use the manufacturing date as the warranty commencement date.

FULL 3-YEAR WARRANTY

This adjustable bed is warranted against defects in the workmanship or materials for a period of one (3) year from the warranty commencement date. Upon notice during the first year from the warranty commencement date, we will send replacement parts (at no cost to the purchaser) for any defective adjustable bed part to the purchaser, and Boyd Adjusta-Flex will pay authorized labor and transportation cost associated with the repair or replacement of any parts Beliani (International) GmbH, Baar determines to be defective. This one (1) year warranty shall not apply if purchaser does not return any and all defective parts to Beliani (International) GmbH, Baar within 15 days of purchaser's receipt of replacement part.

ADDITIONAL TERMS AND CONDITIONS

This warranty does not apply; (a) to any damages caused by the purchaser; (b) if there has been any unauthorized repair or replacement of adjustable bed parts; (c) if the adjustable bed has been mishandled (whether in transit or by other means), subjected to physical or electrical abuse or misuse, (d) to damage to mattress, fabric, cables, electrical cords, or items supplied by Resellers, Contact the Reseller or relevant party for warranty information on these items; (e) if there has been any unnecessary service calls, including cost for in-home service calls solely for the purpose of educating the consumer about the adjustable bed for finding an unsatisfactory power connection; (g) if the recommended weight restrictions are not followed (330 lbs.-TXL; 660-Queen) the warranty will be void.

Repairs to or replacement of the adjustable bed or its components under the terms of this limited warranty will apply to the original warranty period and will not serve to extend such period. The decision to repair or replace defective parts under this warranty shall be made, or case to be made, by Beliani (International) GmbH, Baar at its option and in its sole discretion.

REPAIR OR REPLACEMENT SHALL BE THE SOLE REMEDY OF THE PURCHASER, THERE SHALL BE NO LIABILITY ON THE PART OF BOYD ADJUSTA FLEX FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OR FOR ANY OTHER DAMAGE, CLAIM, OR LOSS NOT EXPRESSLY COVERED BY THE TERMS OF THIS WARRANTY.

This limited warranty does not include reimbursement for inconvenience, removal, installation, setup time, loss of use, shipping, or any other cost or expenses.

We MAKES NO OTHER WARRANTY WHATSOEVER, EXPRESS OR IMPLIED, AND ALL IMPLIED WARRANTIES OR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED BY Boyd Adjusta-Flex AND EXCLUDED FROM THIS AGREEMENT.

PLEASE HAVE YOUR RECEIPT READY AND AVAILABLE. THANK YOU AND ENJOY YOUR ADJUSTA-FLEX BED FRAME!

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to every purchaser specific legal rights, and the purchaser may also have other rights, which may vary from state to state.

PLEASE HAVE YOUR RECEIPT READY AND AVAILABLE. THANK YOU AND ENJOY YOUR BOYD ADJUSTA-FLEX BED FRAME!